

# User Guide

Wide Format Scanners



**Models: IQ Quattro series**

UG12519-12D Feb 2017

## Contents

<b>Contents</b> .....	<b>2</b>
<b>About this Guide</b> .....	<b>2</b>
<b>Overview of the Scanner</b> .....	<b>4</b>
Scanner front view: .....	4
Scanner rear view: .....	5
<b>Installation</b> .....	<b>6</b>
System requirements .....	6
Installation step by step.....	6
<b>Turning the Scanner ON and OFF</b> .....	<b>23</b>
Main power switch.....	23
Sleep and wake modes.....	23
Automatic shut down after idle time .....	25
<b>Loading Originals into the Scanner</b> .....	<b>26</b>
Load, face up, at the scanner's center .....	26
Automatic loading.....	26
Manual loading.....	27
Unloading the original after scan.....	28
Soft Handling.....	29
Setting the input size.....	29
<b>Scanning</b> .....	<b>30</b>
Software applications for scanning.....	30
Running applications from the scanner panel .....	30
Batch scanning.....	30
Monitoring your scanner with WIDEsystem.....	31
<b>rainforest365</b> .....	<b>32</b>
About rainforest365.....	32
rainforest365 is a web application (app).....	32
Supported scanner models: .....	32
Enabling or disabling rainforest365.....	33
<b>Maintenance</b> .....	<b>34</b>
About scanner maintenance .....	34
Cleaning the scan area .....	34
Overview - Key maintenance points - Cleaning.....	35
Calibration.....	42
Replacing the glass plate.....	46
Replacing the glass plate – Overview of key parts.....	48

Downloading New Firmware .....	54
What is Firmware? .....	54
When do I need new firmware? .....	54
How to identify the firmware version running in the scanner.....	54
How to install new firmware .....	54
<b>Trouble Shooting</b> .....	<b>55</b>
How are errors reported on your system.....	55
Correcting common errors .....	55
Technical assistance.....	55
Problems Related to Scanner Installation .....	56
Problems Related to Scanner Operation .....	57
Problems Related to the Scanning Results.....	60
<b>Appendixes</b> .....	<b>61</b>
Important safety instructions .....	61
Regulations .....	62
FCC Regulations.....	62
Scanner weights (unpacked) & dimensions .....	63
Low Adjustable Stand and High Adjustable Stand working heights .....	63

## About this Guide

This guide explains how to operate and maintain your wide format scanner.

The guide assumes basic knowledge of your computer and operating system and does not repeat material from their documentation.

### Be sure to refer to:

1. The [Installation section](#) – describes correct installation of your scanner drivers.
2. The readme.htm file in the ws folder on the *WIDEsystem TOOLS* USB thumb drive. This contains the most current installation and OS compatibility issues.
3. *WIDEsystem TOOLS Help* – After installing your drivers, [open WIDEsystem](#) and press F1. Contains information on using the WIDEsystem application and Scanner Maintenance software.

This user guide covers the following models:

Scanner Name	Model Number	Description
IQ Quattro 2400 Series	MQ52D	24" color scanner
IQ Quattro 3600 Series	MT52D	36" color scanner
IQ Quattro 4400 Series	MR52D	44" color scanner



All above models are ENERGY STAR<sup>®</sup> compliant.



**IMPORTANT:** Be sure to use the WIDEsystem USB thumb drive that came with your scanner or a newer version. Out-of-date versions of WIDEsystem software may not detect your scanner model.




**NOTE:** Windows Compatibility - Your scanner and drivers are tested and developed to support the most current active Microsoft Windows version OS systems. Drivers and interface support in regard to specific Windows versions will follow the Microsoft Support Lifecycle Policy. The compatibility specifications can therefore change accordingly. The most current OS compatibility specifications and drivers will be available on your manufacturer's website.


## Overview of the Scanner

Below: The parts, buttons and areas you need to recognize for using the scanner.

### Scanner front view:

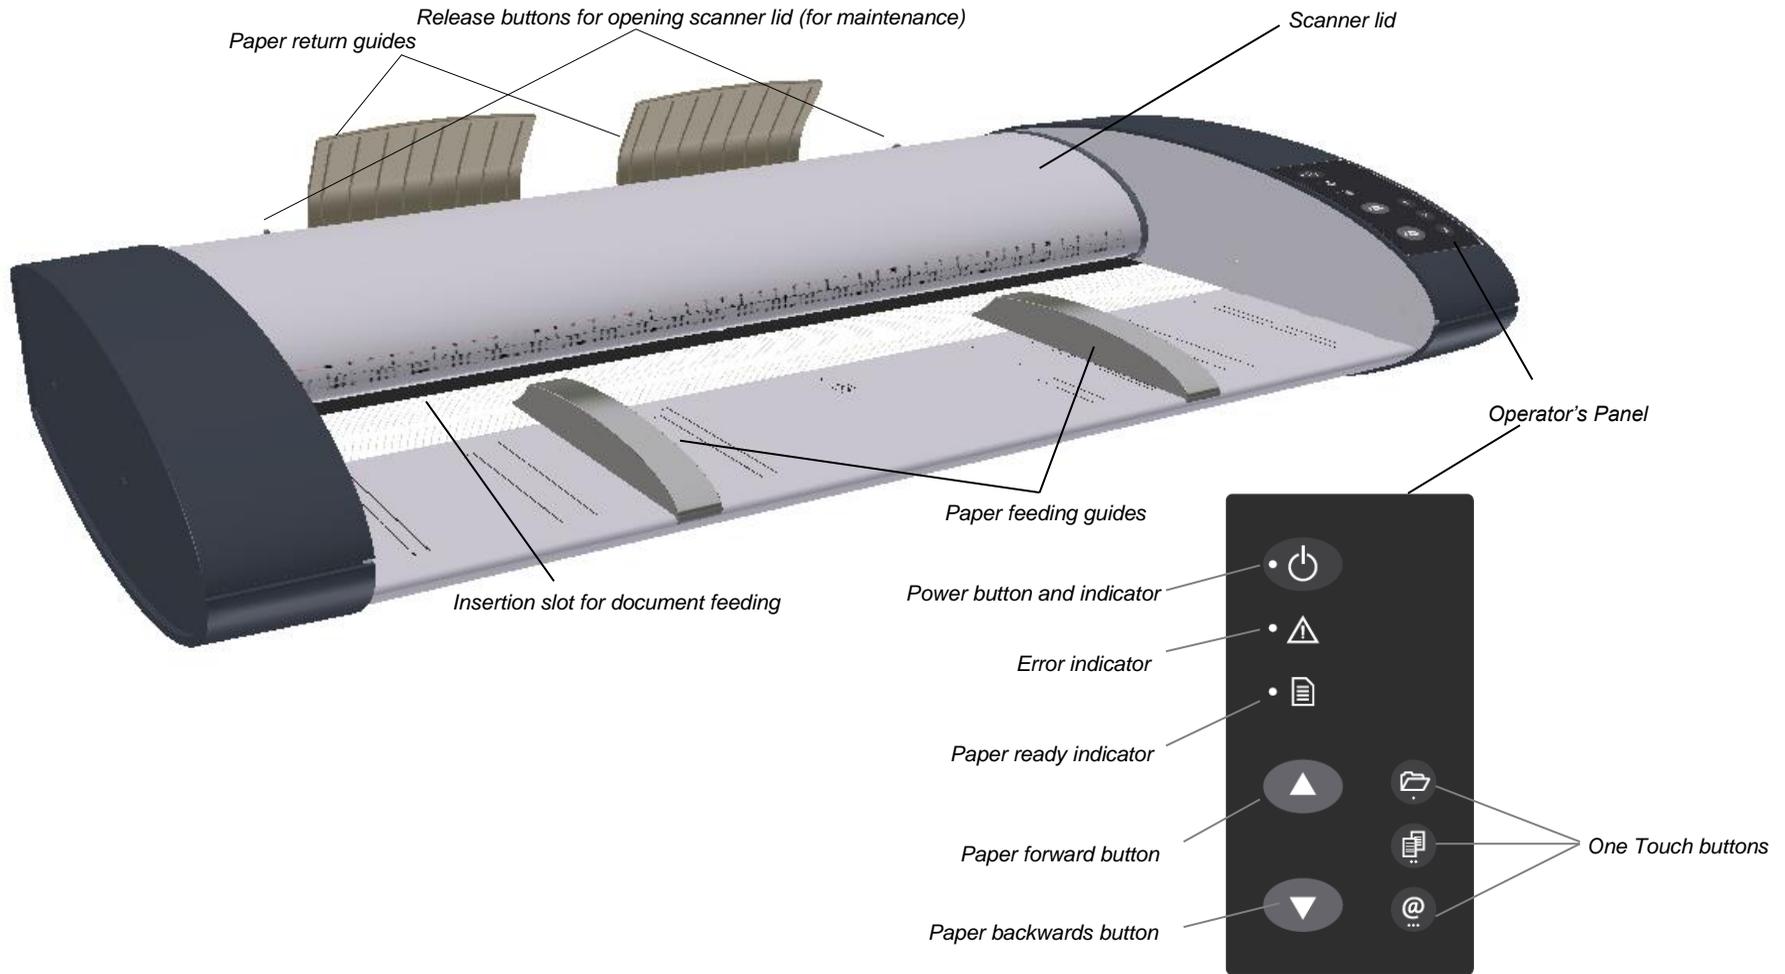

## Scanner rear view:

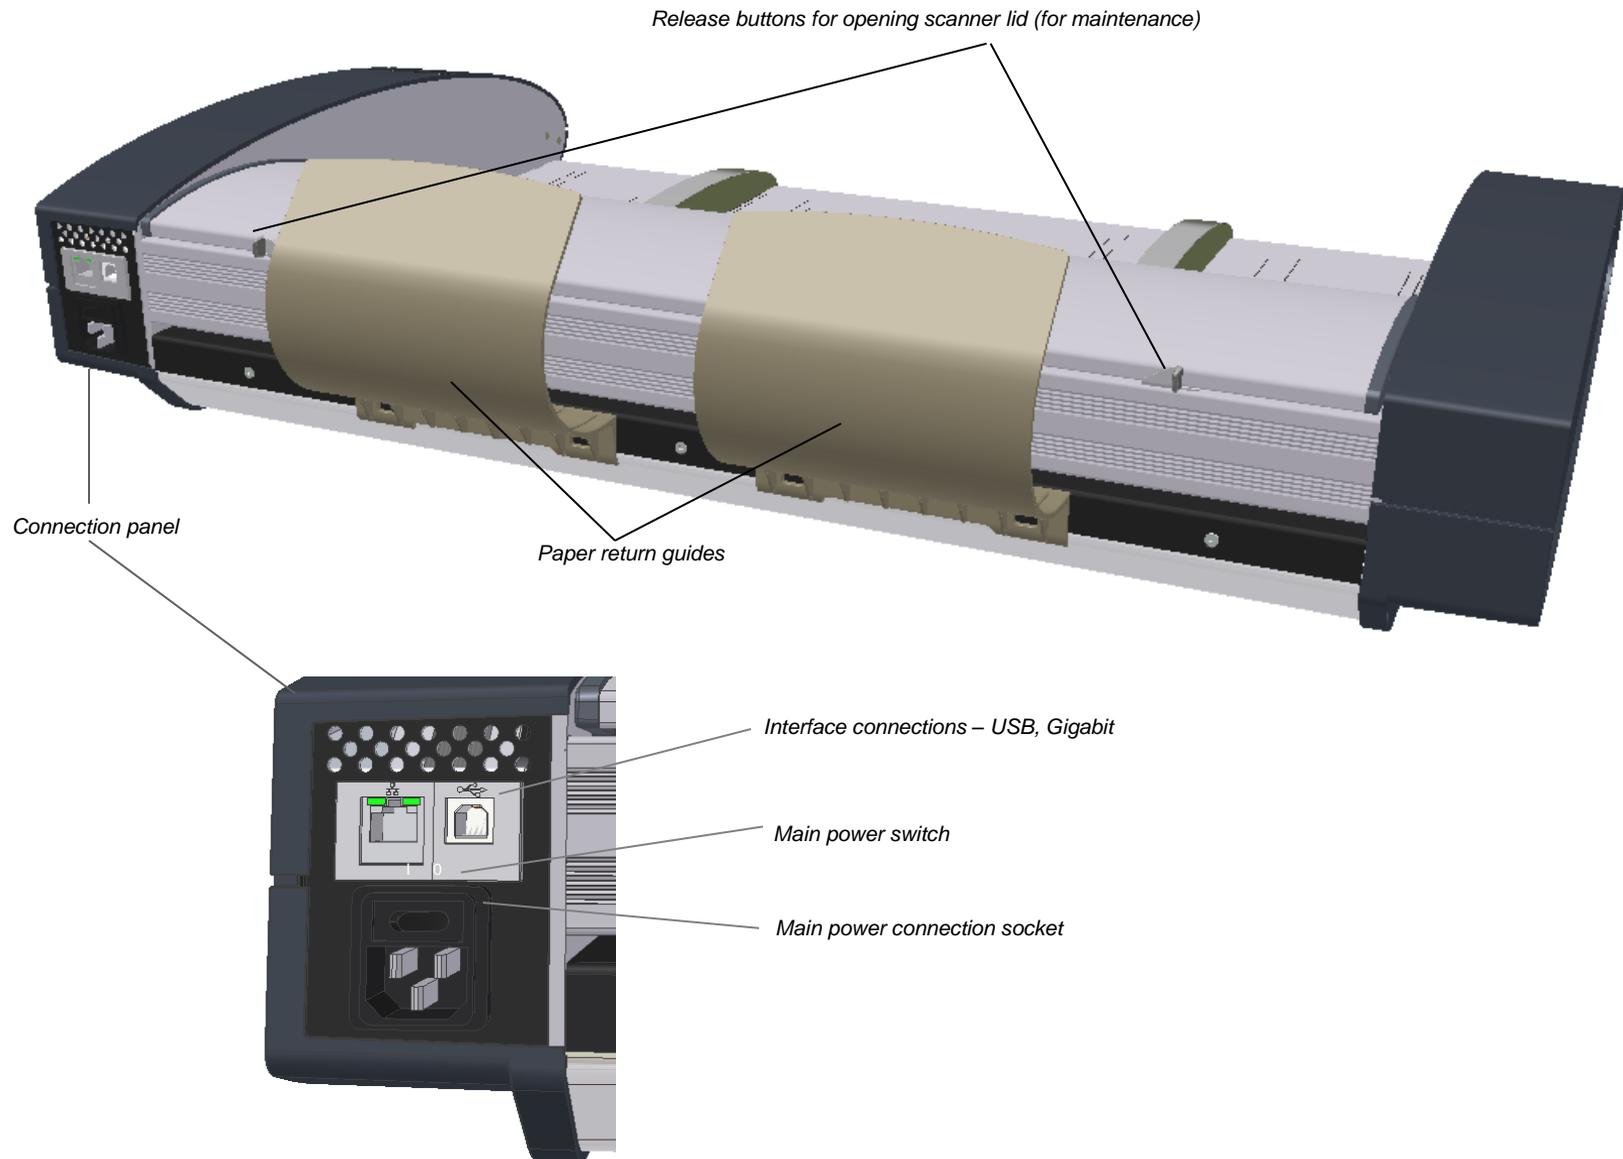

## Installation

Follow the steps below for quick and easy installation of your scanner and scanner drivers.

### System requirements

- PC or supported workstation. Recommended requirements: Core 2 processor, 2 GB RAM, 5 GB of available hard drive space, USB 2.0 interface.
- Compatible Windows operating system – View the *ws/readme.htm* file on the *WIDEsystem* USB thumb drive.
- Enabled USB port on your PC.
- The *WIDEsystem* USB thumb drive supplied with your scanner.
- Scanning software and/or compatible third party software. [See the section on Software Applications for Scanning >](#)
- Grounded power outlet.
- PC with USB port or enabled Gigabit port.



**NOTE:** Gigabit interface compatibility and speeds depend on your scanner model.

### Installation step by step

1

#### Set up the scan station

Your scanner should be placed either on the specially designed stand-alone floor stand or on a sturdy table. Make sure there is enough space behind the scanner to allow the media to run out.



**IMPORTANT:** DO NOT YET CONNECT THE SCANNER TO POWER OR PC.



See also the Safety Instructions at the end of this user guide

## 2

### Install WIDEsystem and scan/copy software on your PC


**!** **IMPORTANT:** WIDEsystem contains your essential scanner drivers. You must install WIDEsystem **before you connect the scanner** or install any scanner software applications.

1. Insert the WIDEsystem USB thumb drive into your PC. Normally the setup program interface will start automatically. If it does not, locate the setup.exe file on the USB thumb drive and start it manually.
2. Follow the instructions on your screen to install the WIDEsystem software and scanner drivers. Reboot the PC when asked to do so to complete installation.
3. Remove the USB thumb drive when the installation completes.
4. If WIDEsystem installed correctly the WIDEsystem icon will show in the pc system tray. 
5. With WIDEsystem working the scan and copy software from Contex or a third-party supplier can now be installed. Select the purchased software program option from the installer menu if required.

**!** **IMPORTANT:** During all installation steps, be sure to select “**YES**” if Windows asks you to allow the software to access the network.

**!** **CAUTION:** DO NOT CONNECT THE SCANNER TO POWER OR TO THE PC YET. This is to ensure your own personal safety and to help protect your device from potential damage during cleaning in the next steps


6. After installing software, leave the PC switched ON as you perform the next steps to prepare and set up the scanner.

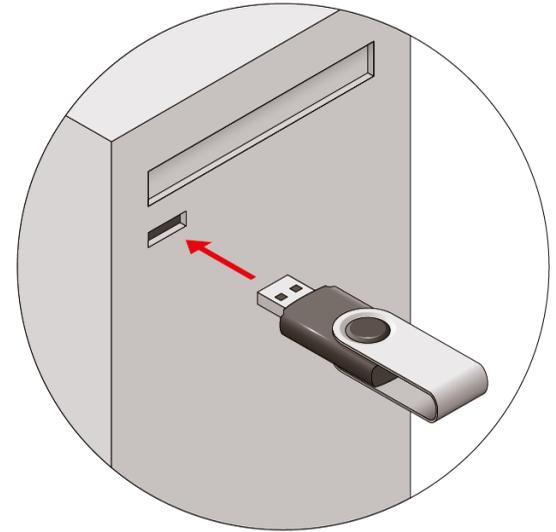

3

## Clean the scanner feeding bed

This is the flat surface in front of the insertion slot. Wipe thoroughly so dirt and dust are not dragged into the scan area with the original.

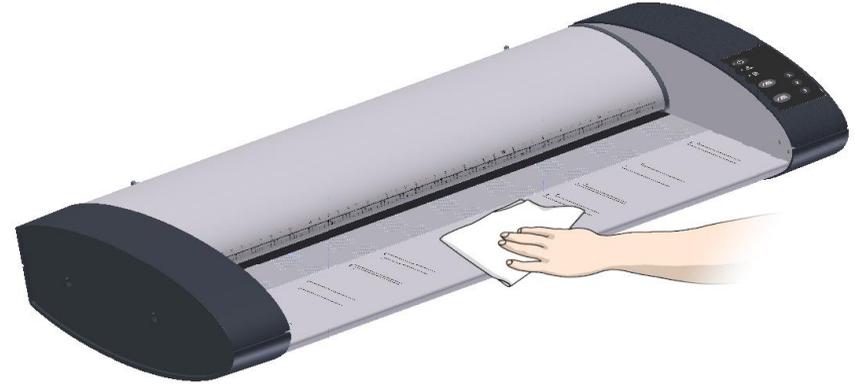


4

## Open the scanner lid – Press the lid release buttons


The internal scan area should be wiped clean for any dust accumulated during packaging and shipping. The scan area is under the scanner lid so you have to open it. The scanner lid release buttons are at the back of the lid.

7. Stand at the front of the scanner.
8. Push down on the lid and simultaneously slide both release buttons towards the scanner's center with your fingers until you feel them unlock.
9. Use your other fingers to grip the edge of the lid.

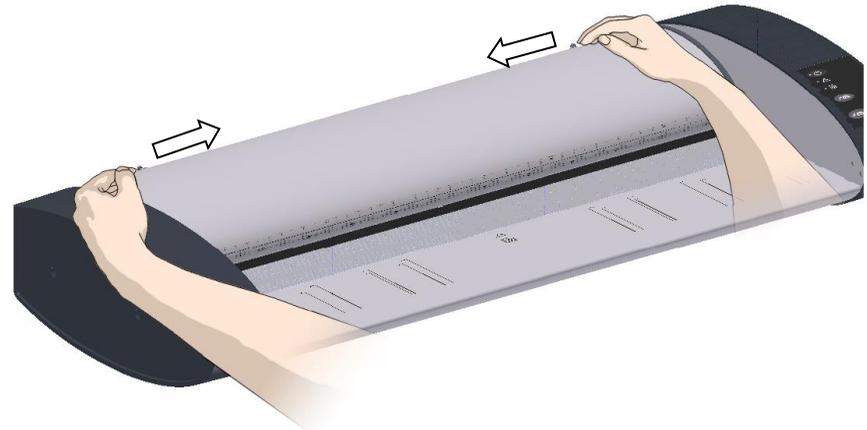

## 5 Open the scanner lid – Pull the lid back

Retain pressure on the lid release buttons and your grip on the lid edge as you pull the lid backwards towards your body. Open the scanner lid all the way back.

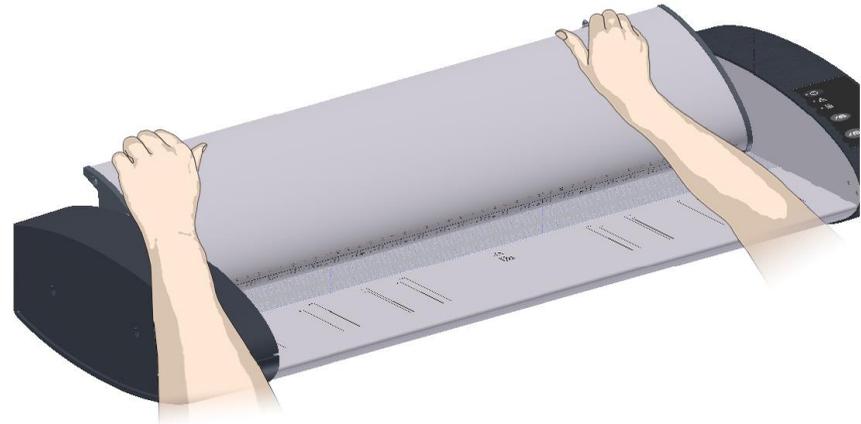

## 6 Clean the internal scan area

Wipe the internal scan area free of dust. Use a dry lint-free cloth.

If you detect smudges on the glass that cannot be wiped clean with a dry cloth, refer to this guide's section [Cleaning the scan area](#) for instructions on thoroughly cleaning the scan area in connection with scanner maintenance.



7

## Connect the power cable to the scanner

Connect the scanner power cable to the scanner's main power connection socket. The main power connection socket is at the scanner's back.




8

## Connect power to the wall outlet

Connect the other end of the scanner power cable to the power outlet.

**!** **CAUTION:** The scanner is equipped with a three-wire (pin) grounding type plug. If you cannot insert the plug into your outlet, contact your electrician to replace the plug or outlet to ensure a grounded power connection. Do not try to defeat or ignore the purpose of the grounding-type plug.

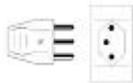

9

## Turn on the scanner

Turn on the main power switch at the back of the scanner



10

## Connect the USB interface cable to the scanner

Initial installation and activation of the scanner is easiest using the USB connection. This applies also for Gigabit enabled models.


1. The interface-connection-panel is found at the back of the scanner – on its left side when facing the back.
2. Connect the B-connector end (square shaped) end to a USB port on the scanner.



**NOTE: For Gigabit enabled scanner models:** The installation wizard will instruct you on installation and activation of the gigabit interface **later** in the installation process. For now – only connect the USB.



**Regulatory Notice:** Your scanner product has been tested to comply with the EMC Standards EN55022 and FCC, Part 15. To maintain compliance, only use the interface cables supplied with the scanner.

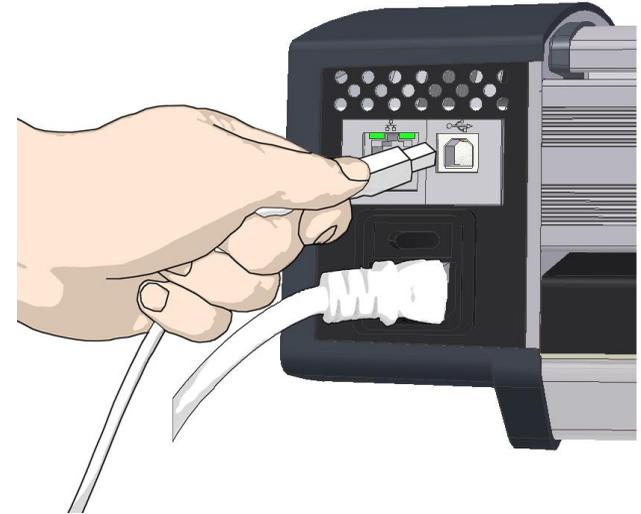


11

## Connect the USB interface cable to the PC

1. On the PC, verify that WIDSystem is running – the WIDSystem icon should be visible in your system tray. 
2. If WIDSystem is not running, locate the WIDSystem entry under your *Programs* menu and start it manually.
3. Make sure the USB cable is connected to the scanner as instructed in a previous step.
4. Connect the A-connector end (flat end) to a USB port on your computer.



**NOTE:** It is recommended to use an available USB port on the **back** of the PC. Using USB ports on the front can affect performance on some PC models.

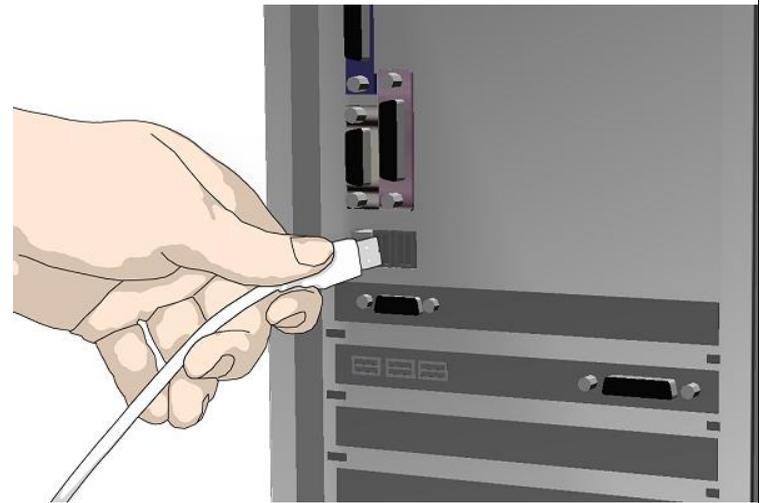


## Scanner installation

12

### The Installation Wizard starts up

1. The driver will detect the scanner and start the scanner installation wizard.
2. On first time installations, the WIDEsystem Scanner Installation Wizard should start after 20 seconds.
3. If the installation wizard does not start up, perform one or more of the following:
  - Unplug and reinsert the USB connections to scanner and PC.
  - Ensure the USB cable is connected firmly at both ends.
  - Try a different USB port on the PC.
  - Make sure the USB is inserted into the port marked for USB at the back of the scanner (and not, for example, the Ethernet port).

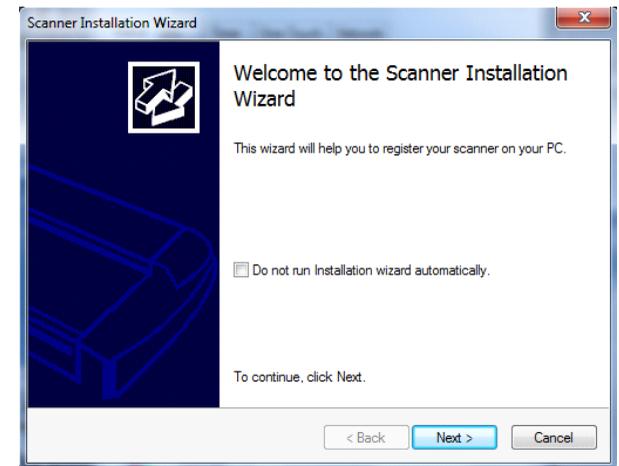


## Scanner installation

13

### Windows installs the scanner

1. Click Next and follow the instructions on your screen to install the scanner on your PC.
2. Most of the scanner installation process is automatic.
3. Wait until the completion message appears
4. Press *Next* when done.

 **IMPORTANT:** During all installation steps, be sure to select “YES” if Windows asks you to allow the software to access the network.

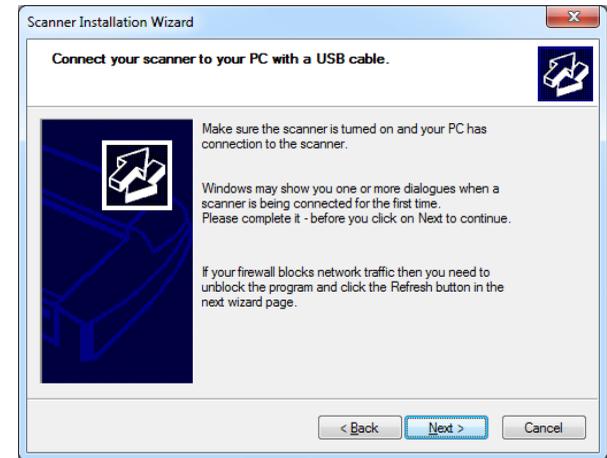

## Scanner Installation


14

### Set energy-star idle time preference

On delivery, the scanner is set for automatic entry into sleep mode after a preset *idle* time, i.e., the length of time the scanner is not active. The default idle time setting for energy star compliancy is 15 minutes.

**You may wish to prolong it to avoid frequent automatic shutdowns.**

Set a new idle time or select *do not sleep* to deactivate automatic entry into sleep mode.

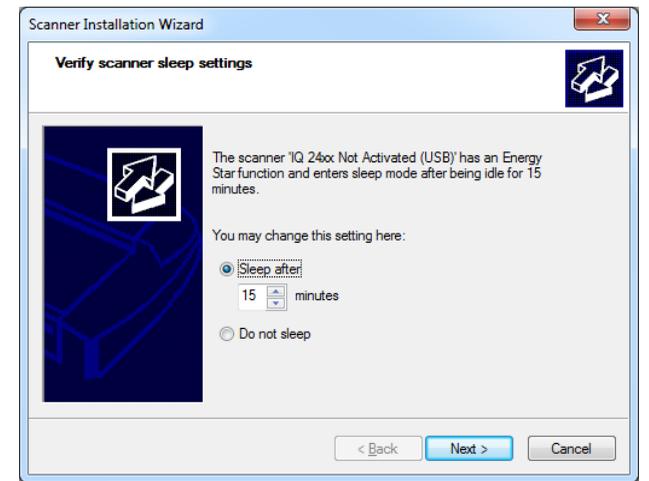

## Scanner Activation

15

### Activate the scanner

You must activate your scanner with its licence before you can use it. Please follow the *Scanner Activation Wizard's* instructions.



**NOTE:** Your supplier may have pre-activated the scanner for you. If the scanner is pre-activated, the wizard will skip this step and following steps 16a, 16b.

#### About license keys and activation codes:



- You will need to enter your license key that came with your scanner.
- Contact your dealer if you do not have a license key.
- **Online** activation will only require the license key.
- **Manual** activation will additionally require an **activation code**. Activation codes can be obtained from your dealer or through the manufacturer's License website. Follow the instructions *Manual Activation* (below) to obtain an activation code through the manufacturer's License website.

#### To activate the scanner:

1. Press the *Activate* button to start the activation wizard.
2. You are presented with 2 ways to activate the scanner – *Online* and *Manual*.
3. If your PC is connected to the Internet, choose **Online** activation, otherwise choose **Manually**
4. If you chose *Online*, proceed to the instructions in step 16a (and skip 16b). If you chose *Manual*, proceed to the instructions in step 16b (skip 16a).



**IMPORTANT:** During all installation steps, be sure to select “**YES**” if Windows asks you to allow the software to access the network.

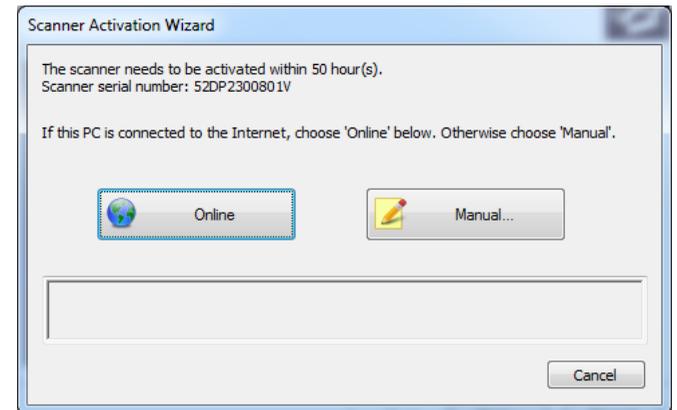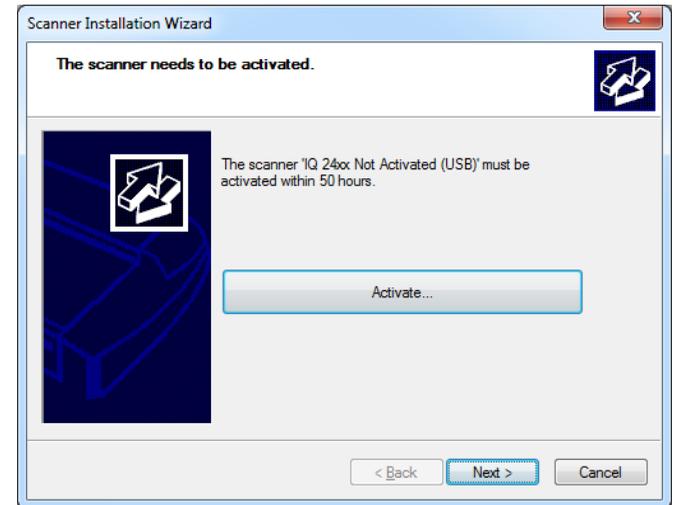



## Scanner Activation - Online

16a

### Online activation

Online activation is very easy. You only need your license key. When you choose *Online* as the activation method, the dialog shown on the top right appears.

1. Enter you license key in the designated field.
2. The key will be authenticated online right after it is entered and if valid, a green tick will appear as shown in the dialog shown on the right-middle.
3. Press the *Activate* button to continue.
4. The *Success* dialog will indicate successful activation.

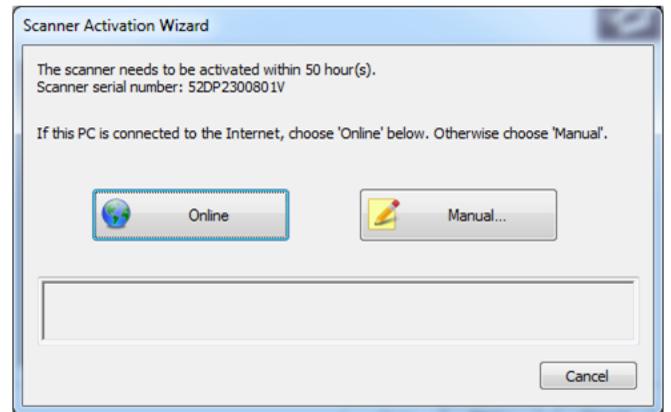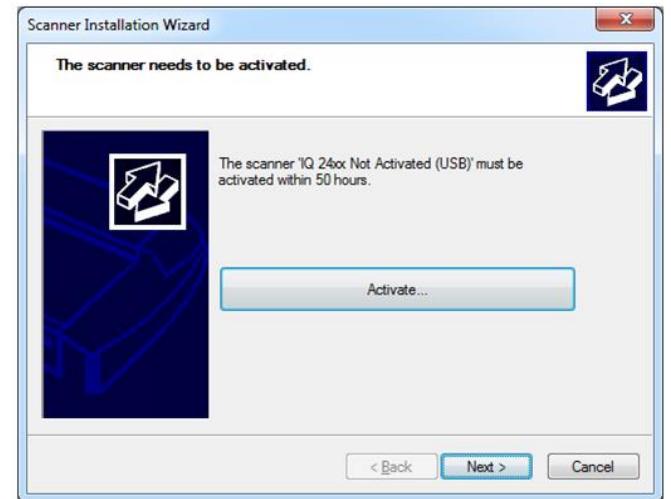

## Scanner Activation - Manual

16b

### Manual Activation

- Have your *license key* ready before proceeding. If you don't have one contact you dealer.
- Manual Activation uses an *Activation Code* that requires the *scanner ID* (either a *serial number* or the *hardware ID*) and the *license key*. The *hardware ID* is read from the scanner and displayed automatically by the pc wizard (\*1) during the manual activation process.
- You will need internet access (from any device) to process the *license key* and *scanner ID* to build the *activation code*.

Follow the instructions below (repeated in the wizard):

1. Write down or copy the *hardware ID* displayed by the wizard (\*1). You will need to transfer both of these to the online activation form.
2. Go to [www.licenseactivate.com](http://www.licenseactivate.com).
3. In the *License Activation* web form enter the scanner *serial number* (see label on back of scanner) or the *hardware ID* (from the wizard in step \*1).
4. Now enter your *license key* into the second field. Click the Activate button to generate the *Activation Code* (\*2).
5. Note down or copy the *Activation Code* from the web form (\*3).
6. Type in or paste the *Activation Code* into the Manual Scanner Activation wizard dialog (\*4). Press Activate then press Next.
7. The wizard will now activate the scanner. When complete a success message will be displayed.

The screenshots show the following steps:

- Step \*1:** The 'Scanner Activation Wizard' dialog box displays the hardware ID: AADB-4AWB-CSAB-WAAY-SABF-EANA.
- Step \*2:** The 'License Activation' web form shows the 'Activation information' section with the Serial Number or Hardware ID and License Key fields.
- Step \*3:** The 'License Activation' web form shows the 'Activation Code information' section with the generated Activation Code: ACSMBP-JZM6NF-V9P2X5-DRPJU8-2T333L-ERLFKQ.
- Step \*4:** The 'Scanner Activation Wizard' dialog box shows the Activation Code entered into the 'Code' field.

A final 'Success' message box indicates: 'Scanner is restarting. Please wait...'

## Scanner Installation – Change network name

17

### Change the scanner network name (optional)





**NOTE:** This step only appears with licensed Ethernet supported scanners as detected during activation.

You may wish to change the default name of the scanner to comply with your organization.

Test network connection using the “Test” Button. Use “Settings...” to change network configuration.

Click *Next* when done.

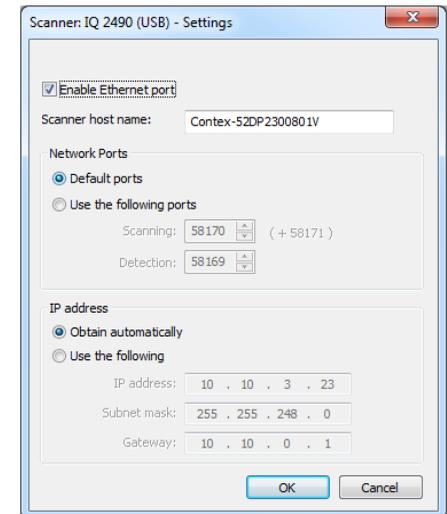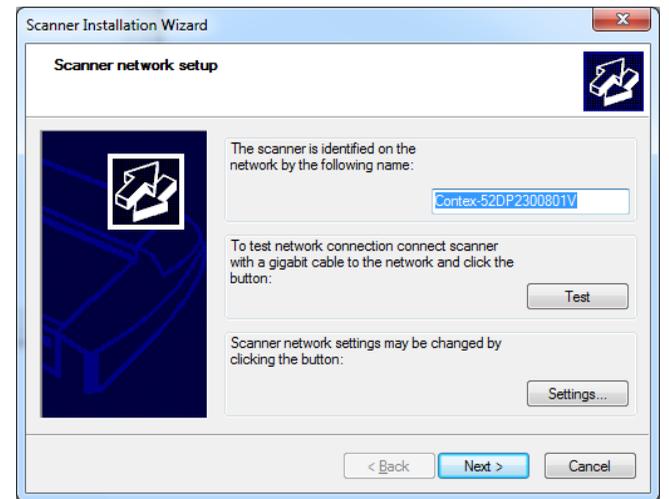



## Scanner Installation

18

### Calibrate the scanner – camera alignment

Transportation of your scanner could have slightly moved the cameras and they need to be realigned.

1. Press *Calibrate* to start the wizard.
2. Follow the wizard's instructions to perform camera alignment.
3. If you did not clean the internal scan area/glass as instructed in the previous installation steps, then do so now.
4. You will be asked to insert your calibration sheet that came with the scanner.
5. Be sure to align the sheet arrow with the scanner middle arrow.
6. Press the Camera Alignment button. The system will do the rest.
7. The wizard will notify you when calibration has completed successfully. ✓
8. Upon successful completion, remove the calibration sheet.
9. See also the *Scanner Maintenance and Calibration Guide* for complete and illustrated instructions.

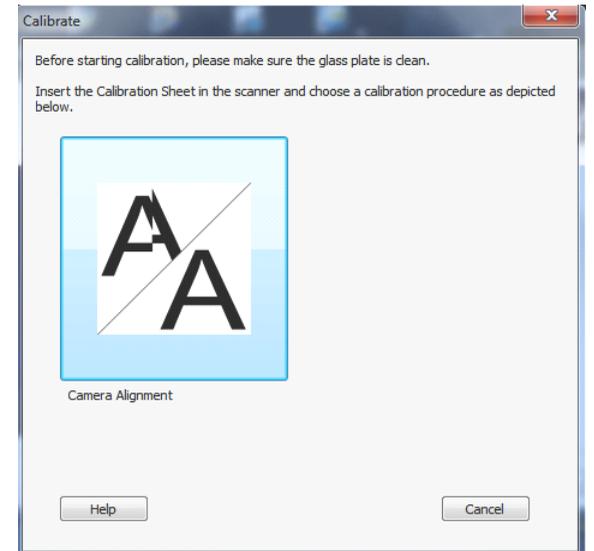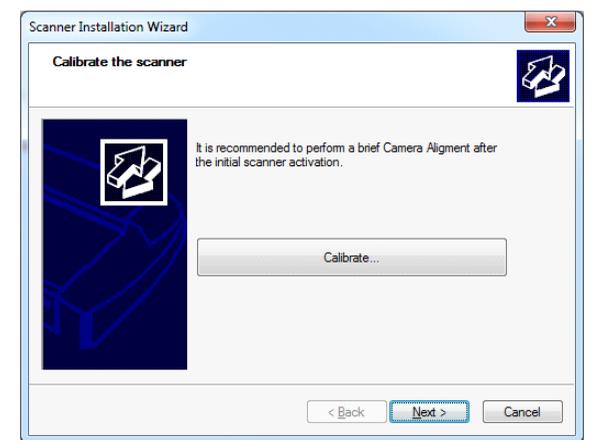

## Scanner Installation


19

### Installation complete

The scanner has been installed correctly when you see this message.

For models that supports Gigabyte, proceed to the steps for enabling gigabyte on the scanner plus sharing it on the network.

For USB only scanners - you can also choose to share the scanner on the network. Instructions for sharing USB scanners on the network follow below.

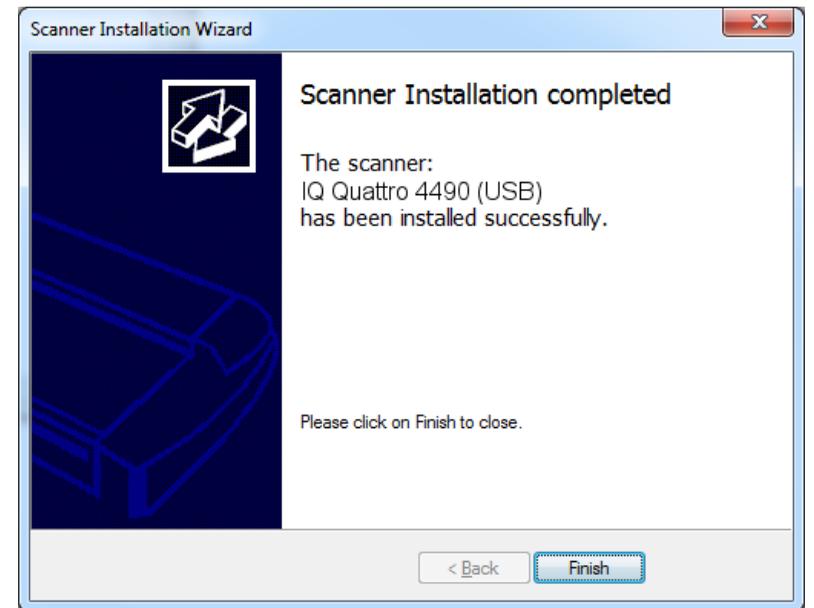

## Enabling Gigabit Interface

20

### Enable Gigabit Ethernet Interface (optional)

#### For scanner models with gigabit interface support

For gigabit enabled scanners - Optimal speed according to specifications may require you connect the scanner to a gigabit connection. If network installation was skipped earlier here is how to add the scanner manually.

#### To enable gigabit interfacing:


1. Disconnect the USB connection to your PC
2. Connect an approved gigabit cable to the scanner Ethernet interface socket at the scanner's back.
3. Connect the other end of the gigabit cable to your LAN.
4. Open WIDEsystem – if not already open, double--click the WIDEsystem icon  in the system tray.
5. Press the Refresh Scanner List button 
6. The system will automatically include and share the scanner on the network and enable scanning at gigabit speeds.



NOTE: Use only an approved gigabit cable. Full specified performance cannot be guaranteed with other cables or normal LAN cables.



NOTE: WIDEsystem will provide a warning if you are running on a gigabit scanner without a gigabit connection.

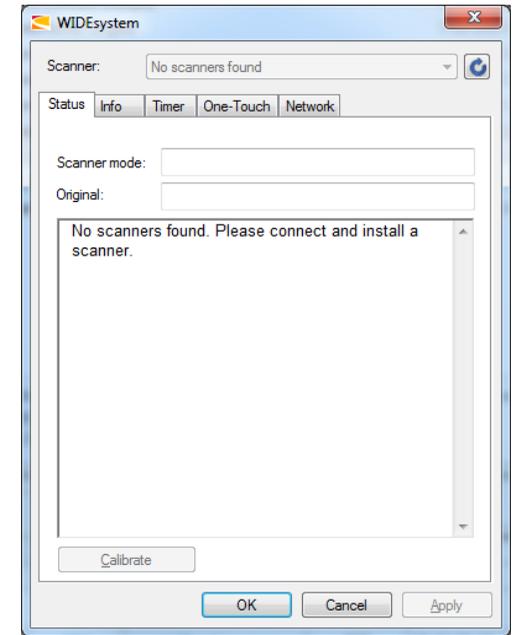

Set up USB connected scanner for sharing on the network

21

## Set USB scanner for sharing on the network (Optional)

For USB only (non-gigabit) scanner models

You can enable other PCs on the LAN to use the USB connected scanner. This is called “Sharing”. After activating the scanner, You can set it up as a “shared scanner” through WIDEsystem.



**NOTE:** These instructions apply only for scanners using USB interfacing to PCs. Gigabit scanners will be shared automatically. See the previous instructions for enabling gigabit on models that support it.

1. Make sure your PC with the scanner connected via USB is connected to the LAN.
2. Double -click on the WIDEsystem program icon  and select the Network tab.
3. Select the option: Share the scanner on the network.
4. Press the OK button to accept the settings.


On most LAN systems, this is all you have to do. However, some systems will require Advanced settings, such as specific communication port numbers. Contact your LAN administrator for information regarding Advanced settings.



**NOTE:** Open WIDEsystem and press the <F1> key for viewing complete on-line help regarding the Network setup procedures and options including Advanced settings.




**NOTE:** PCs on the LAN that will use the scanner must be installed with WIDEsystem and compatible scan/copy software.

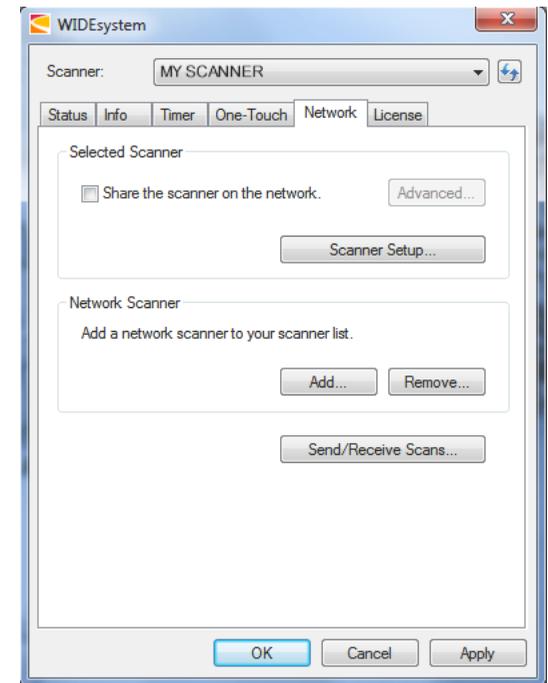

## Turning the Scanner ON and OFF

### Main power switch


The main power switch is at the back of the scanner. Press the left side of the switch (marked "I") to turn the main power to ON. Press the right side of the switch (marked "0") to turn the main power to OFF.

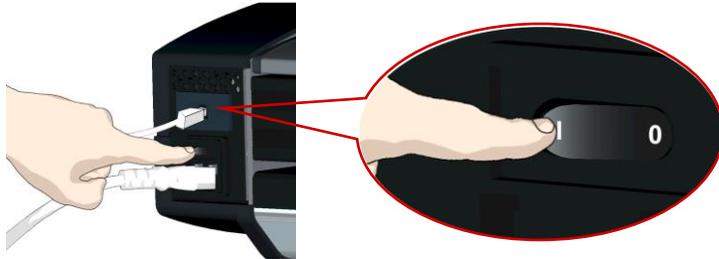

Main power switch is at the back of the scanner. Press "I" for ON and "0" for OFF.

### Self-test procedure


When you turn the main power ON, the scanner runs a short self-test procedure. This takes less than one minute. The 3 LEDs on the panel will be on during the self-test procedure.

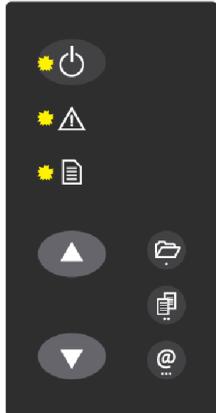

All LEDs are on during self-test

### Scanner ready to scan

The scanner is ready for scanning when the power LED turns green. The scanner starts up in *Wake* mode (see next section).

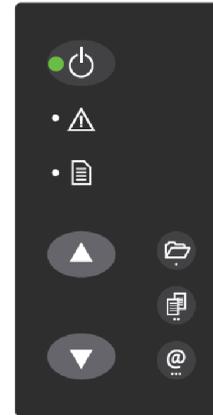

Scanner ready – in *Wake* mode.

You can leave the main power switch permanently ON and control scanner power through its **Sleep** and **Wake** modes.

## Sleep and wake modes


With the main power switch ON, scanner power can be set in *Sleep mode* and *Wake mode*. **Sleep** mode is the energy saving mode. The scanner cannot scan when in the *Sleep* mode. **Wake** mode is the full power ON mode for scanner operation.

The scanner will go from *Wake* mode into **Sleep** mode:

- Automatically: after a set idle time (see [Sleep mode options](#) below).
- Manually: when you hold the power button down for 3 seconds.




Hold down the power button to enter Sleep mode.

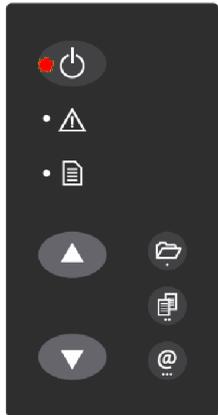

Scanner in Sleep mode – Power LED is red

The scanner will go into **Wake** mode from **Sleep** mode:

- When you feed a document into the scanner.
- When you press the power button.

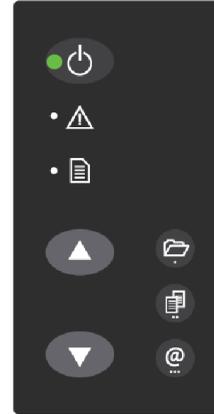

Scanner in Wake mode – Power LED is green

## Automatic shut down after idle time


On delivery, the scanner is set for automatic entry into sleep mode after a preset default *idle* time, i.e. the length of time the scanner is not active. You can prolong or shorten the idle time value to match your normal workflow.



**NOTE:** You will be prompted to change the idle time during installation. If you have done this you can omit this step unless you wish to reset.

### To change/set the sleep mode options:


1. Open WIDsystem - double-click the WIDsystem icon  in the system tray.
2. Select the *Timer* Tab.
3. Select or deselect the *Enter Sleep mode automatically* option. If you do not select the *Enter Sleep mode automatically* option, you will need to use the manual method for entering sleep mode by holding the power button down for 3 seconds.
4. If you do select *Enter Sleep mode automatically* option, proceed to the next step to set the *Idle time* value.
5. Set the value *Idle time before entering sleep*. This is the number of minutes the scanner can stand idle before entering the sleep mode on its own.
6. Press *Apply* to download your settings into the scanner's memory.

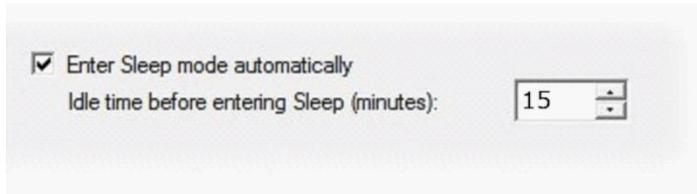

*Sleep Mode options in the WIDsystem program – Timer tab*



**NOTE:** With the scanner main power ON, the scanner can be also be brought into Wake-up and Sleep modes **manually** even while the *Enter sleep mode automatically* option is selected.

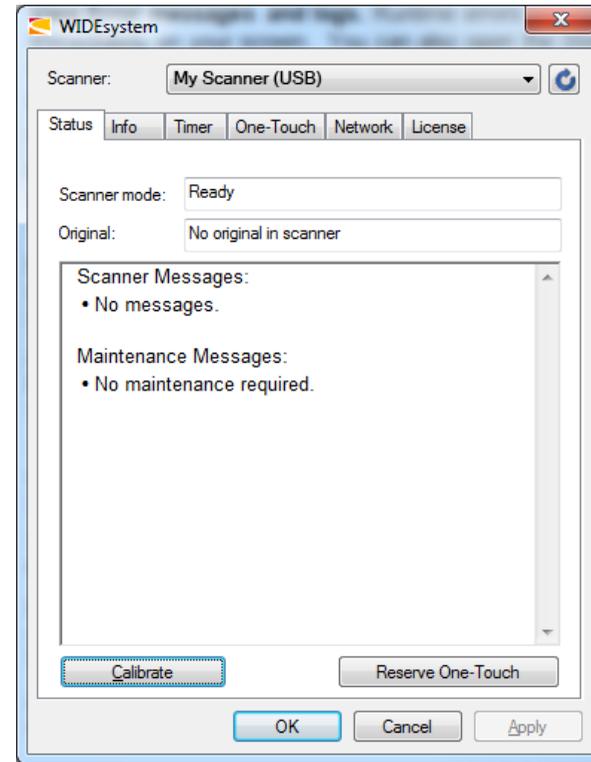

- **Wake** - by pressing power button on the panel or inserting a document for scanning.
- **Sleep** – by pressing and holding down the power button for 3 seconds. You can choose to disable automatic entry into *Sleep mode* entirely if you want only manual activation of the sleep mode or, you can leave it enabled and retain both manual and automatic functions.

## Loading Originals into the Scanner

### Load, face up, at the scanner's center

Load your document with the image side facing upwards. Align the center of the document with the center arrow marking on the scanner bed.




Use the standard size markings to help align the document for a straight scan path.

You can use [automatic loading](#) or [manual loading](#). These loading options are available in the scan/copy application.



**NOTE:** The availability of the *automatic* and *manual* loading options will depend on your [scan/copy software](#) and its level of compatibility with the scanner model.

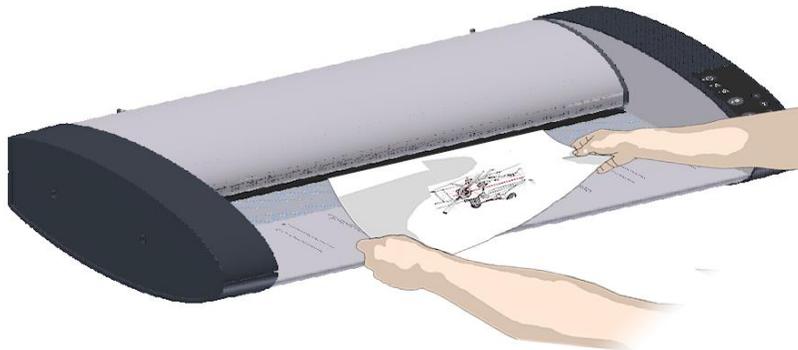


Load the paper, face up. Hold with both hands and align the document's center with the scanner center marking.

## Automatic loading

With **automatic loading**, the scanner takes the original as soon as you insert it in the paper slot. Automatic loading is reliable for most jobs and especially useful for batch scanning jobs.

1. Make sure the Paper handling option "*Auto load*" is set in your scanning application.
2. Align the center of the document with the center arrow marking on the scanner bed.
3. Push the original into the insertion slot until you feel it contact the rollers and the Paper Ready LED lights green.

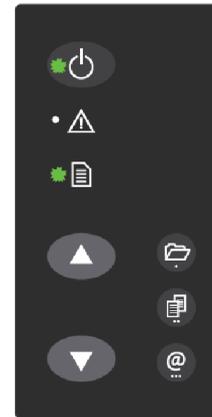

*Paper Ready LED green just before the paper feeds*

4. The scanner will grab the original automatically and move it into start-scan position.
5. A delay factor can be set in the scanning application. The delay will give you time to control straight positioning of the document if you feel the scanner is grabbing the original too fast.

## Manual loading

1. Make sure the Paper handling option “*Manual*” is set in your scanning application.
2. Align the center of the document with the center arrow marking on the scanner bed.
3. Push the original into the insertion slot until you feel it contact the rollers and the Paper Ready LED lights green.
4. While holding the original in place with one hand, use the other hand to




press and hold down the Paper Forward button on the scanner.

*When Paper Ready LED is green – press the Paper Forward button*

5. The original moves into the start-scan position.

## Unloading the original after scan

1. Press the Paper Backward button to eject the original back to the scanner feeding bed (towards you).

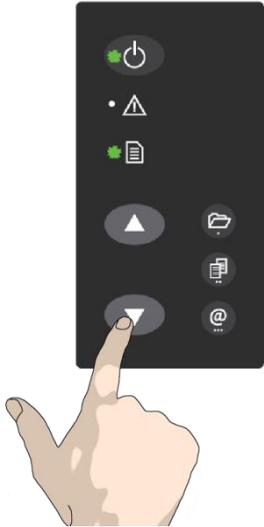

2. Press the Paper Forward button if you wish to eject the original out the back of the scanner.



## Soft Handling

The *Soft-handling* option can be selected in your scan application. Soft-handling means that feeding and scanning are slowed down. You can use the option with both *Manual* and *Automatic* loading.



**NOTE:** The availability of the soft handling load option depends on your [scan/copy software](#) and its level of compatibility with the scanner model.

Use *Soft-handling* with:-

1. Old, curled or creased originals that trigger a paper jam. See [Trouble Shooting – Paper Jam error](#) for correcting a paper jam error.
2. Fragile originals you want passed delicately through the drive system.

## Setting the input size

The *Input size* defines the scan area. You enter the input size in your application's input size dialogs.



**NOTE:** The availability of the *Input size* options described below will depend on your [scan/copy software](#) and its level of compatibility with the scanner model.

*Three ways to set find and set the input size:*

1. **Use automatic size detection** - The scanner will detect the edges of the document and calculate the input size for you.
2. **Set a standard size** - common standard sizes are marked on the scanner bed. Use these markings to determine which standard size matches the original and then select that size in the application's *input size* dialog.
3. **Set the size manually** for irregular sizes. Measure your document with the inch/cm ruler on the scanner bed. Enter your width measurement in the *width* setting field in your application's *input size* setup dialog. You can also measure and set a *length* value or choose automatic length detection.

## Scanning

### Software applications for scanning

Your scanner is controlled through scan, copy or imaging software installed on your PC.

**Optimal full featured scanning functionality** is obtainable through scan and copy software specifically developed for compatibility with your scanner model. See the scanner manufacturer's website for information on scanner software and compatible third-party applications.

### Running applications from the scanner panel

Normally you would control the scanner from your PC through your scan software user interface. However, your scanner also supports one-touch buttons that enable you to trigger scanner compatible software from the scanner panel. Configuration of your one-touch buttons is controlled through WIDEsystem. Please refer to the on-line help in WIDEsystem and your compatible scanner software for instructions.



The one touch buttons "Scan", "Copy" or "Email"

### Batch scanning

Batch scanning involves jobs where you want to feed and scan a whole set of originals that require equal scan settings. The basic steps are:

1. Set your scan settings (size, type, image adjustments..) for the batch. Your settings will apply to ALL the documents in the batch.
  2. Set the scan software into *Batch Mode*. This will tell the scanner to start scanning as soon as the document is fed so you don't need to trigger the scan.
  3. Choose [Automatic loading](#) (optional) - for fast and effective loading.
- Read you scan software's on-line help pages for specific information on batch scanning with the application.




**NOTE:** The availability of Batch scanning options will depend on your scan/copy software and its level of compatibility with the scanner model.

## Monitoring your scanner with WIDEsystem

You installed WIDEsystem with the scanner drivers. WIDEsystem contains an application that monitors the scanner and reports on its functionality.

Double left click the system tray's WIDEsystem icon  to open the WIDEsystem control interface.

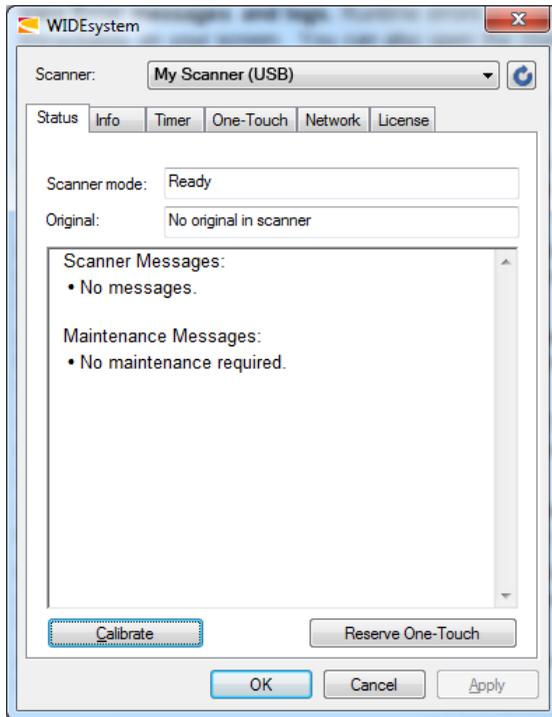

WIDEsystem program control interface

### With WIDEsystem you can:

**View the scanner's status.** Move the mouse over the scanner icon on the system tray. Status messages include whether or not the scanner is detected, connection and runtime errors and readiness for scanning.



Scanner status message on Windows system tray

- **View Error messages and logs.** Runtime errors are reported immediately on your screen. You can also open the *Status* tab and *Log* tab for viewing error messages.
- **View information about the scanner device** in relation to firmware and hardware revisions. Open the *Info* tab.
- **Install new firmware** – You download new firmware to a folder on your machine. Then right click on the scanner icon, select *Advanced Options > Update Scanner Firmware* to install it on your scanner.
- **Initiate a scan of the system's hardware bus** for re-establishing the interface. Right click on the scanner icon, select *Advanced Options > Rescan Hardware Bus*.
- **Assign/reassign applications to the scanner's one-touch-scan buttons**, or disable the one-touch-scan buttons altogether. Open the *One-Touch* tab to make settings.
- **Set up your scanner so it can be shared by other PC's on the network.** Open the *Scan to Net* tab to make settings. See also [Installation - Share the scanner on the LAN](#).
- **Set up your scan software so it can access shared scanners on the network.** Open the *Scan to Net* tab to make settings.
- **Launch the WIDEsystem on-line help.** To find instructions on trouble shooting and using WIDEsystem with your scanner. Open WIDEsystem and press the F1 key.
- **Activate and upgrade your scanner.** Open the *License* tab. You will need to have a valid license for the activation/upgrade
- **Launch the scanner calibration wizard.** Right click on the scanner icon, select *Calibrate*.
- **Launch the WIDEsystem on-line help.** To find instructions on trouble shooting and using WIDEsystem with your scanner. Open WIDEsystem and press the F1 key.

## rainforest365

### About rainforest365

Any rainforest365 enabled Context scanner can send documents directly to your preferred destinations. Rainforest365 does not require a PC. Instead it simply utilizes your smart phone or tablet to control the process.



Load the document, scan the QR code on the scanner and send the document directly to your desired destination.



Email



Dropbox



HP ePrint



Google Drive



Microsoft SkyDrive



Box.com



**NOTE:** Destinations may be added or removed from the web app. No updates required.

### rainforest365 is a web application (app)

As a web app rainforest365 is supported by any smartphone or tablet with a QR reader and a browser.

- iOS Devices (iPad, iPhone or iPod): rainforest365 can be added in your iOS device as a web App. Once you have scanned the QR code simply select "Add to home screen" in your iOS browser to create the Web App icon. Now you can bring up rainforest365 directly from your iOS device whenever you need a scan.
- On your Android device the same is possible. Simply add the webpage to your favorites. From there you can add them to your start menu.

### Supported scanner models:

All scanners in the IQ Quattro series support rainforest365.

## Enabling or disabling rainforest365

Rainforest365 may be enabled as part of the installation. After installation you may enable or disable rainforest365 using these steps.



Double left click the system tray's WIDsystem icon  to open the WIDsystem control interface.

Select the "Network" tab and click "Scanner Setup" to show the setup dialog.

You may enable or disable rainforest365 with the "Enable rainforest365" option.



**NOTE:** If the "Enable rainforest365" option is not shown then your scanner model does not support rainforest365. Contact your local sales representative to upgrade your scanner model to one of the supported models listed above.

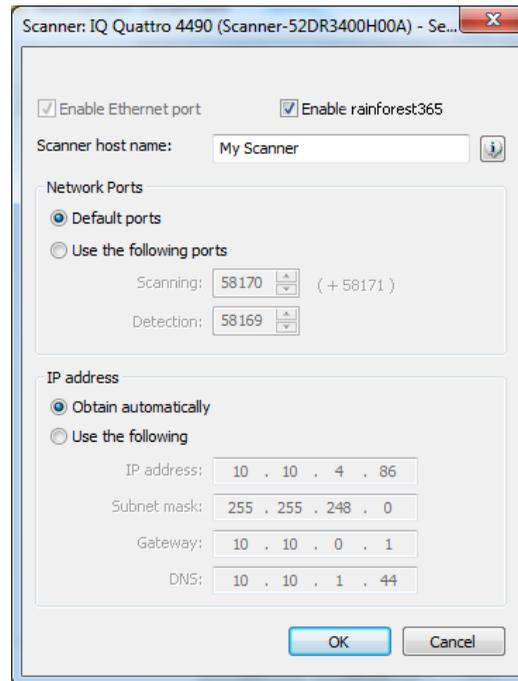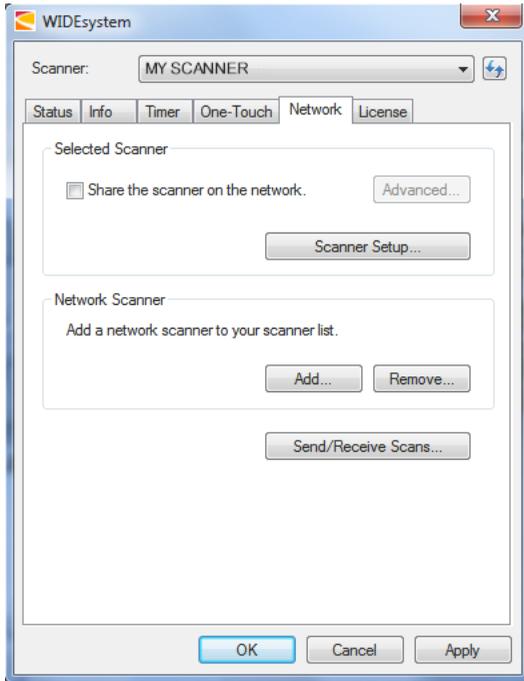

## Maintenance

### About scanner maintenance

Scanner maintenance will ensure optimal performance of your scanner. There are three basic maintenance tasks.

1. **Cleaning**

Keep your scanner clean – the next section describes how to thoroughly clean the internal scan area. How often you need to clean will depend on how often and the types of media you scan. If your work primarily involves scanning newspapers and old blueprints you may need to clean more often than users who only scan brochures and new drawings. Be sure to clean the scanner when results are not optimal. Particles of dust in the scan area can sometimes be the sole cause of streaks in the end result.

See more under the section [Cleaning the scan area](#)

2. **Calibration**

Calibrate the scanner if your output is not optimal and cleaning (above) does not remedy the problem. Calibration will renew the scanner's original color and BW precision. Scanner Calibration is easy to perform. To run, you insert a Calibration Sheet, and start the Scanner Maintenance program. The rest is done by the program. Make sure the scanner is clean before calibrating.

See more under the section [Calibration – Scanner Maintenance program](#).

3. **Replacing the glass plate**

This should be carried out when a worn glass plate affects your results. You may need a new glass plate if streaks still appear on the image even after cleaning the glass. See more under the section [Replacing the glass plate](#).

### Cleaning the scan area

How often you should clean your scanner will largely depend on how much you use the scanner and the condition of your documents. Generally, be sure to clean at least once a month and always right before important jobs that require a high degree of precision.

#### You must clean the following scanner parts/areas:


- The scanner bed
- Glass plate
- Upper precision rollers
- Lower pressure rollers
- Lower rubber transport rollers



**NOTE:** To help locate these parts on the scanner, see the [Overview of key maintenance points – Cleaning](#) on the next page.

## Overview - Key maintenance points - Cleaning

The illustration below shows the scanner from above with its lid open. The illustration indicates the key points (parts and areas) you need to recognize when cleaning the scanner. Instructions regarding the cleaning tasks that involve these points follow below.

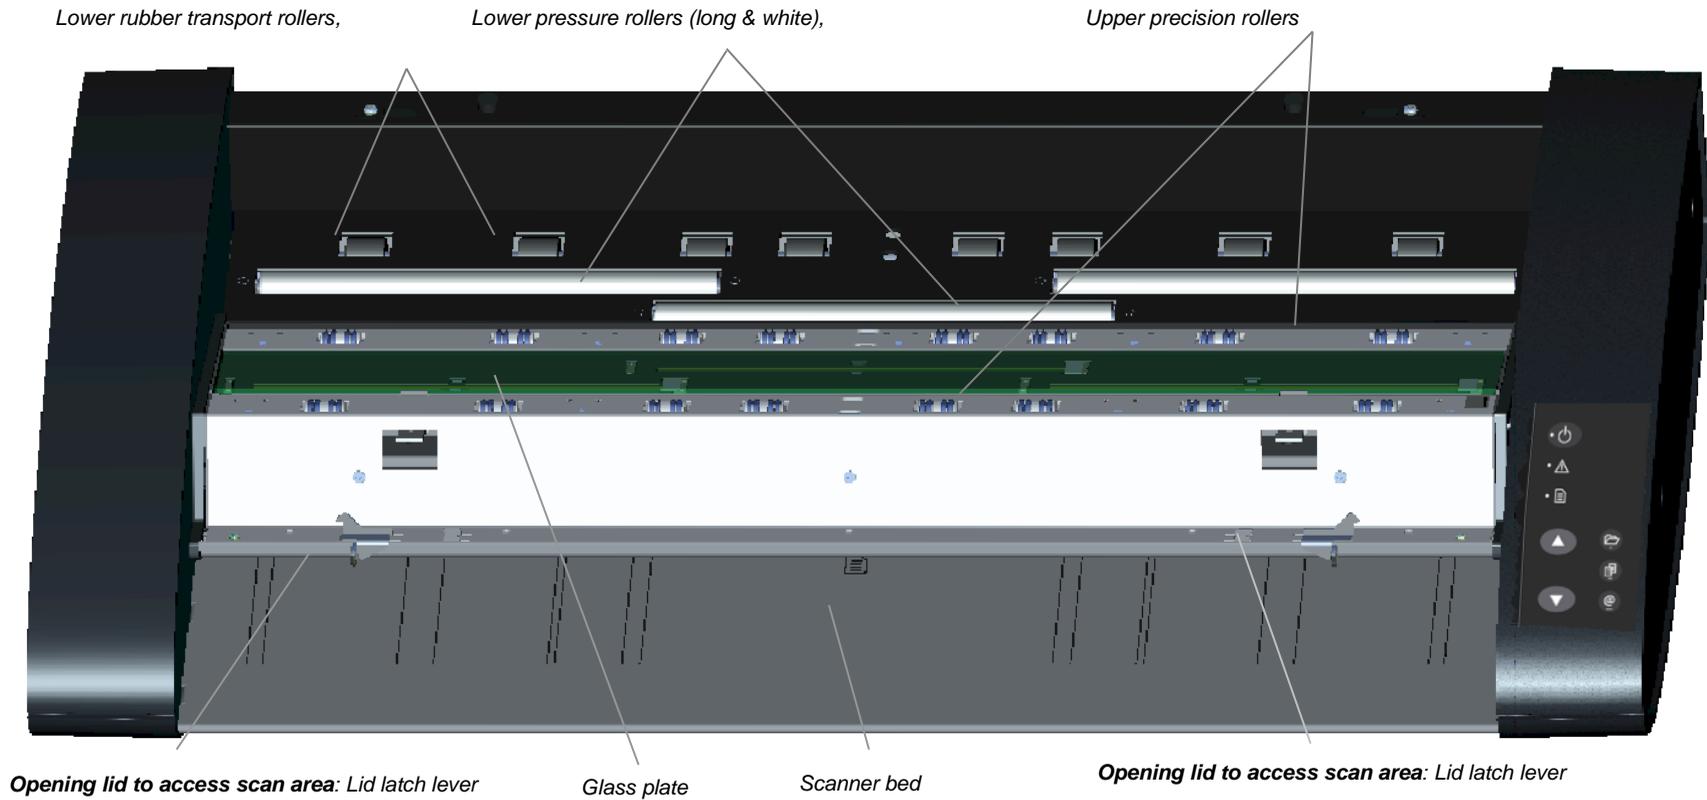


*To clean your scanner:*

1

## Turn the main power to OFF


Press the main power switch at the back of the scanner to the OFF position ("0").

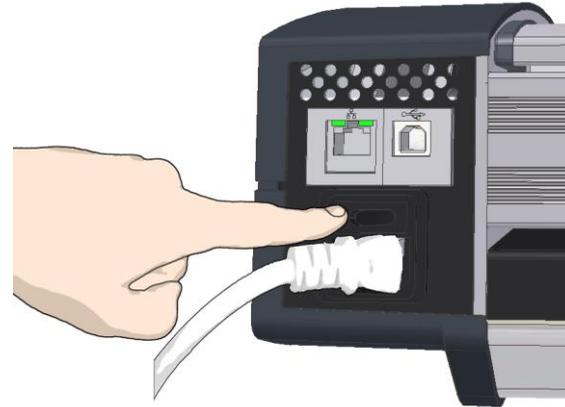

2

## Disconnect the scanner power plug

**⚠ CAUTION:** Always disconnect power before cleaning the scanner. This step is to ensure your own personal safety and to help protect your device from potential damage.

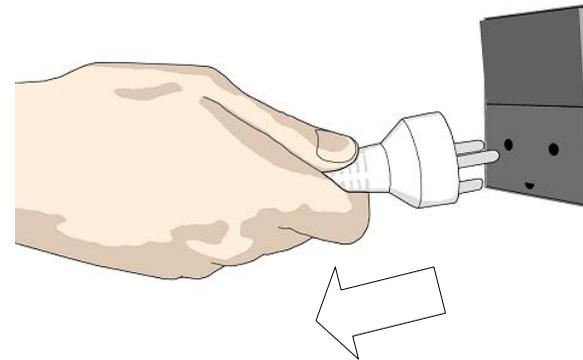

3

## Clean the scanner surface

Clean your scanner's flat surface so dirt and dust are not dragged into the scan area with the original.




4

## Open the scanner lid – Press the lid release buttons


The next steps involve cleaning the scan area under the scanner lid so you have to open it. The scanner lid release buttons are at the back of the lid.

1. Stand at the front of the scanner.
2. Push down on the lid and simultaneously slide both release buttons towards the scanner's center with your fingers until you feel them unlock.
3. Use your other fingers to grip the edge of the lid.

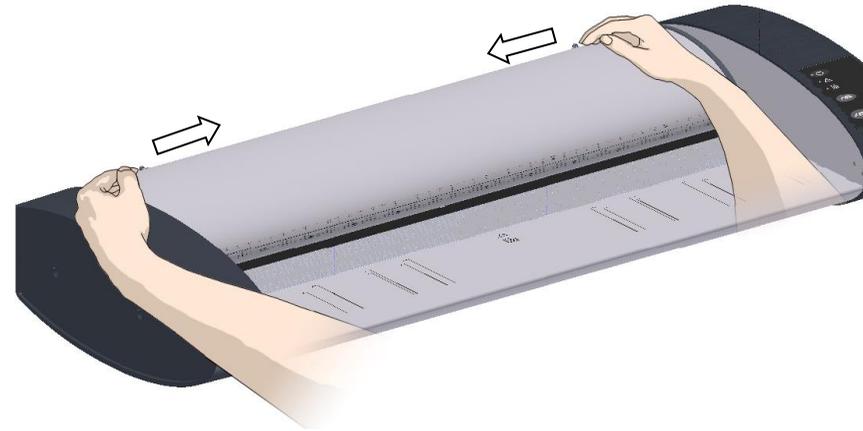

## 5 Open the scanner lid – Pull the lid back

Retain pressure on the lid release buttons and your grip on the lid edge as you pull the lid backwards towards your body. Open the scanner lid all the way back.

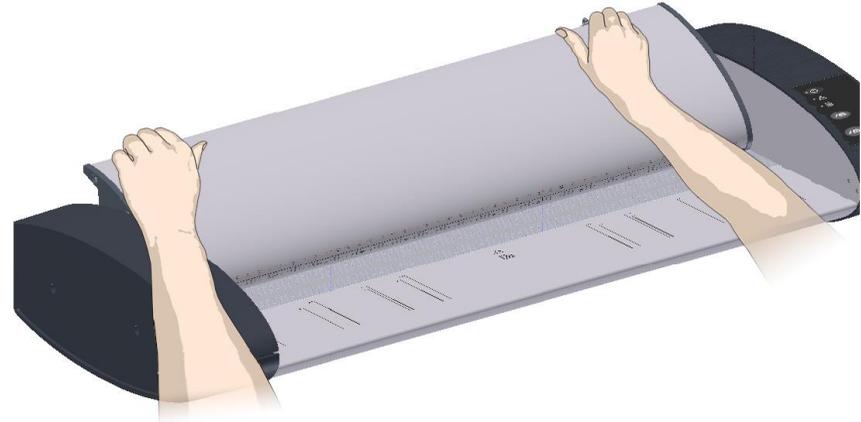

## 6 Clean the scanner glass plate

Make sure you use 2 fresh and clean lint-free cloths for cleaning the glass plate. Do not reuse the cloth you used to wipe the scanner bed.

1. Spray/apply a mild, streak-free, glass cleaner onto a lint-free cloth.
2. Gently wipe the glass clean.
3. Dry the glass completely using the other clean, dry lint-free cloth.
4. Make sure that fluids do not get under the glass and that you leave the area dry.

**!** **CAUTION:** Do not spray/apply cleaner fluids directly on the glass plate or anywhere else in the scan area.




7

## Clean the upper precision rollers

The upper precision rollers are in the lid, aligned in two rows on each side of the glass plate. Their function is to keep the document on a straight path as it moves forward in the scanner. The upper precision rollers are in direct contact with the original's ink side and thus may require extra care when cleaning.

1. Spray/apply a mild, streak-free, glass cleaner onto a lint-free cloth.
2. Gently wipe the rollers surface.
3. Use the cloth to turn the rollers so you wipe all sides.
4. Dry the rollers completely using another clean, dry lint-free cloth.
5. Make sure that you leave the area dry.

 **CAUTION:** Do not spray/apply cleaner fluids directly to the rollers or anywhere else in the scan area.

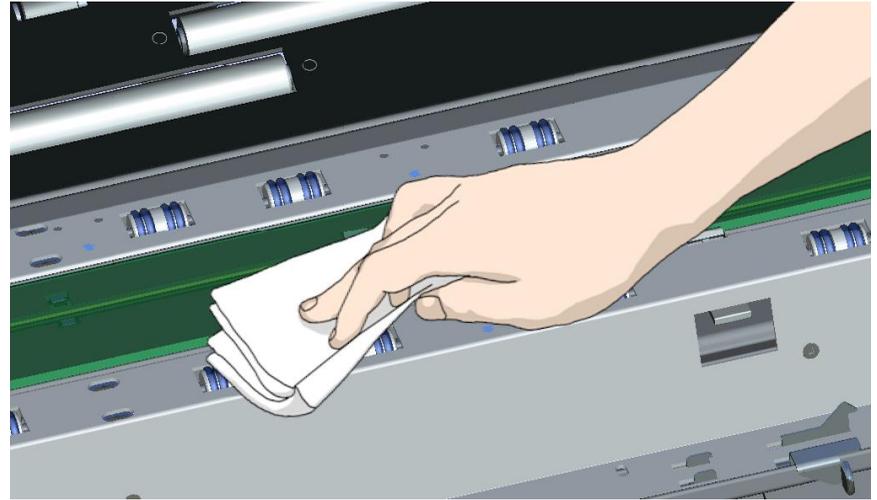


8

## Clean the white pressure rollers

The white pressure rollers are the long rollers between the transport rollers. They function to hold documents flat in the scanner.

1. Spray/apply a mild, streak-free, glass cleaner onto a lint-free cloth.
2. Gently wipe the white roller's surface.
3. Use the cloth to turn the rollers so you wipe all sides.
4. Dry the rollers completely using another clean, dry lint-free cloth.
5. Make sure that you leave the area dry.

 **CAUTION:** Do not spray/apply cleaner fluids directly to the rollers or anywhere else in the scan area.

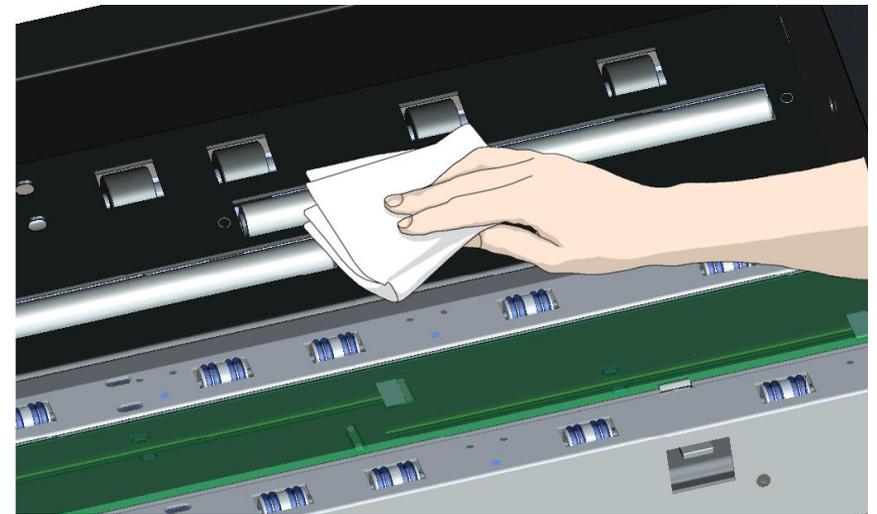

9

## Clean the transport rollers

The transport rollers are placed in two rows on each side of the white pressure rollers. The black transport rollers are motorized and function to move the document through the scanner.

1. Spray/apply a mild, streak-free, glass cleaner onto a lint-free cloth.
2. Gently wipe the transport roller's surface.
3. Use the cloth to turn the rollers so you wipe all sides. The transport rollers are all connected on the axels so you only need to turn one to turn them all.
4. Dry the transport rollers completely using another clean, dry lint-free cloth.
5. Make sure that you leave the area dry.


 **CAUTION:** Do not spray/apply cleaner fluids directly to the rollers or anywhere else in the scan area.



10

## Close the lid

1. Close the scanner lid all the way down until you hear the lid latches "click".
2. Gently try to pull open the lid to ensure it is locked in the "closed" position in both sides.
3. Plug in the scanner and turn the main power switch to ON.

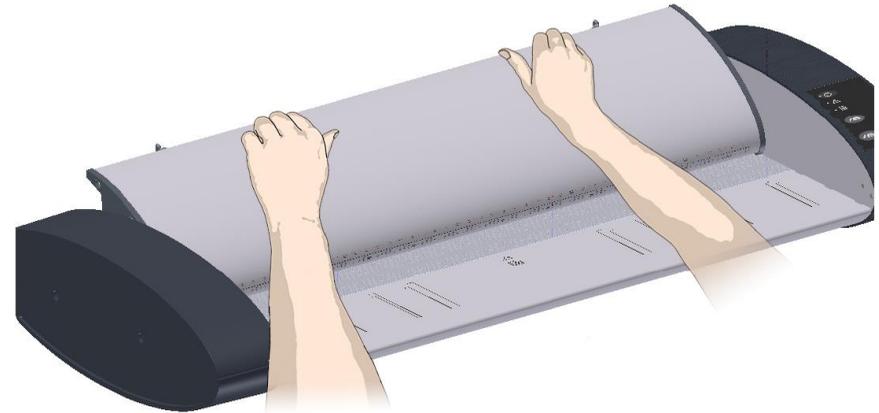

**11**

## Your scanner is clean

You have completed the steps required for cleaning your scanner and the scan area.



## Calibration

Scanner calibration is very easy to perform. Calibration is carried out using the *WIDEsystem* program you installed with your drivers. After manually cleaning the scan area, you just start the *Calibration* wizard and let it take over. The wizard will ask you to insert a calibration sheet. Other than that, scanner calibration is completely automatic.



**NOTE:** Cleaning and calibration are tied together. Cleaning the scanner creates the need for renewed calibration and correct calibration will always require a clean scan area.


### *To calibrate your scanner:*

1

### Turn the scanner power ON

If the main power is OFF, press the main power switch at the back of the scanner to the ON position. If the scanner is in *Sleep* mode, press any button to set it in *Wake* mode.


The scanner is ready for calibration when the power LED lights green.

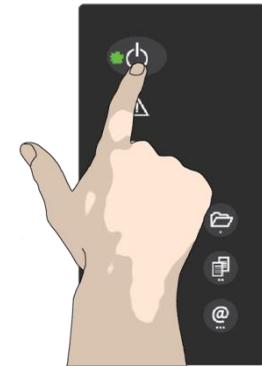


## Calibration

2

### Launch the scanner calibration wizard

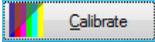1. On your PC – Double-click on the WIDeSystem icon  in the system tray to open the WIDeSystem program.
2. Press the Calibrate button. 

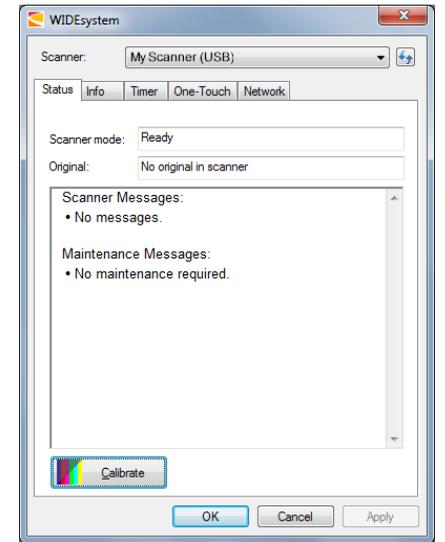


## Calibration

3

### Select the Calibration type

Select either Camera Alignment or Full Calibration.


1. Camera Alignment will align horizontal capture for correct image stitching
2. Full Calibration will perform Camera Alignment, B&W calibration and Color calibration

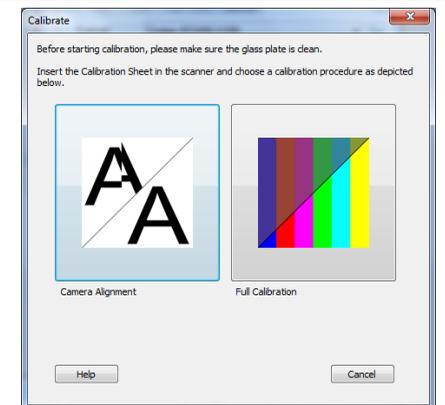

4

## Insert the calibration sheet

During the process, the wizard will ask you to insert the *Calibration Sheet* that came with your scanner. **The sheet's printed side must be inserted face up.** Align the sheet's midpoint arrow with the scanner's midpoint arrow and feed the sheet into the scanner.

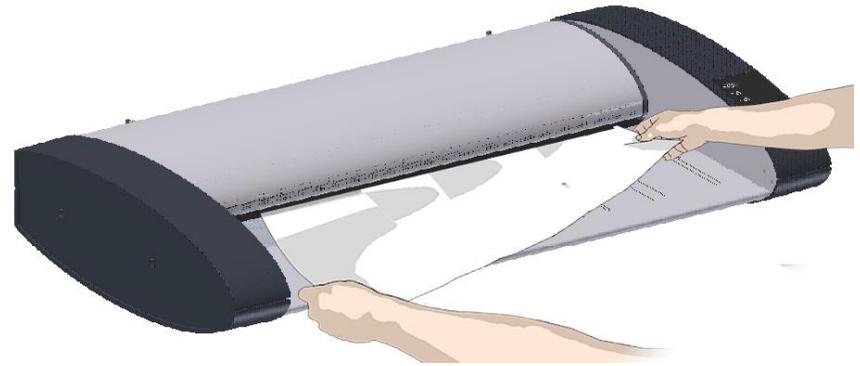

## Calibration

**5**

### The program calibrates the scanner


The program works in steps to analyze and correct the status of the sensors, calibrate black and white values and calibrate color (on color scanners). The calibration sheet will be rescanned a number of times as the program processes data.

Let the program complete the calibration steps you requested (Alignment or Complete).

The wizard will tell you when the process is finished.

After Calibration:

1. Remove the Scanner Calibration Sheet from the scanner.
2. Return the Scanner Calibration Sheet to its protective tube.
3. Store the folder in a dry place and out of direct light.

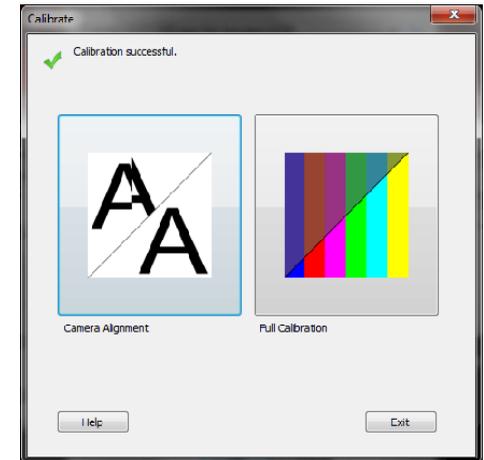

## Replacing the glass plate

**Replacing the glass plate:** Your documents move against the glass plate as they pass the scanner's sensors. After long-term use, the glass plate can become worn or scratched and this can affect image capture precision. Changing the glass will renew your scanner and ensure optimal results.

*To replace a worn glass plate:*


### 1 Turn the main power to OFF

Press the main power switch at the back of the scanner to the OFF position.



### 2 Disconnect the scanner power plug

**!** **CAUTION:** This step is to ensure your own personal safety and to help protect your device from potential damage.

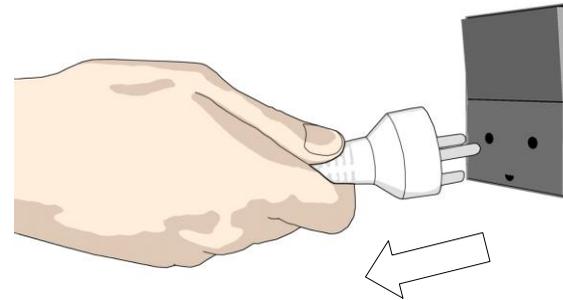


3

## Open the scanner lid – Press the lid release buttons

The glass plate is in the scan area under the scanner lid. You need to open the lid to replace it.

1. The scanner lid release buttons are at the back of the lid.
2. Stand at the front of the scanner.
3. Push down on the lid and simultaneously slide both release buttons towards the scanner's center with your fingers until you feel them unlock.
4. Use your other fingers to grip the edge of the lid.

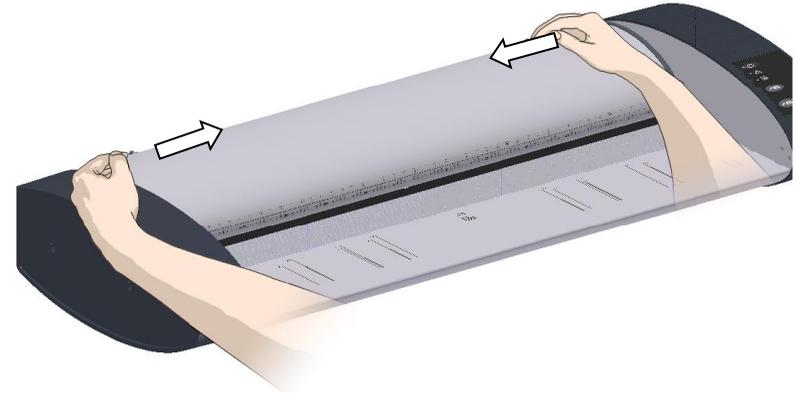


4

## Open the scanner lid – Pull the lid back

1. Retain pressure on the lid release buttons and your grip on the lid edge as you pull the lid backward towards your body.
2. Open the scanner lid all the way back.


You will need to locate and recognize the key parts you will use for replacing the glass plate. See the [overview of key parts](#) below.

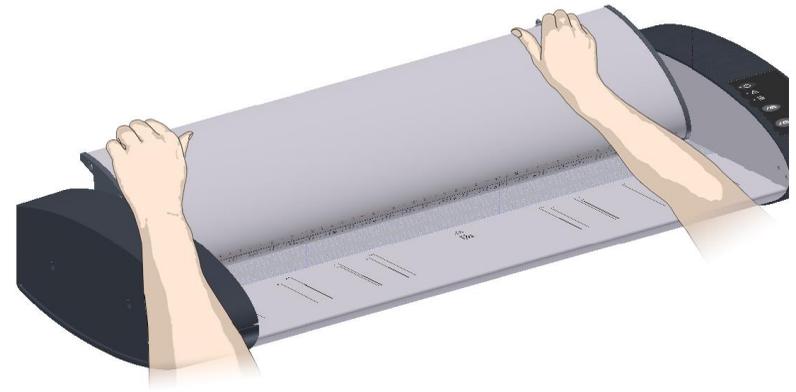

## Replacing the glass plate – Overview of key parts

The illustration below shows the scanner from above with its lid open. The illustration indicates the key parts and buttons you need to recognize when replacing a worn glass plate.

The glass plate is held and locked in place with 2 small white-colored latches. Each latch can be released from the glass plate by pressing down on its corresponding latch release button. Each latch release button is placed in a square hole just under the latch it releases.

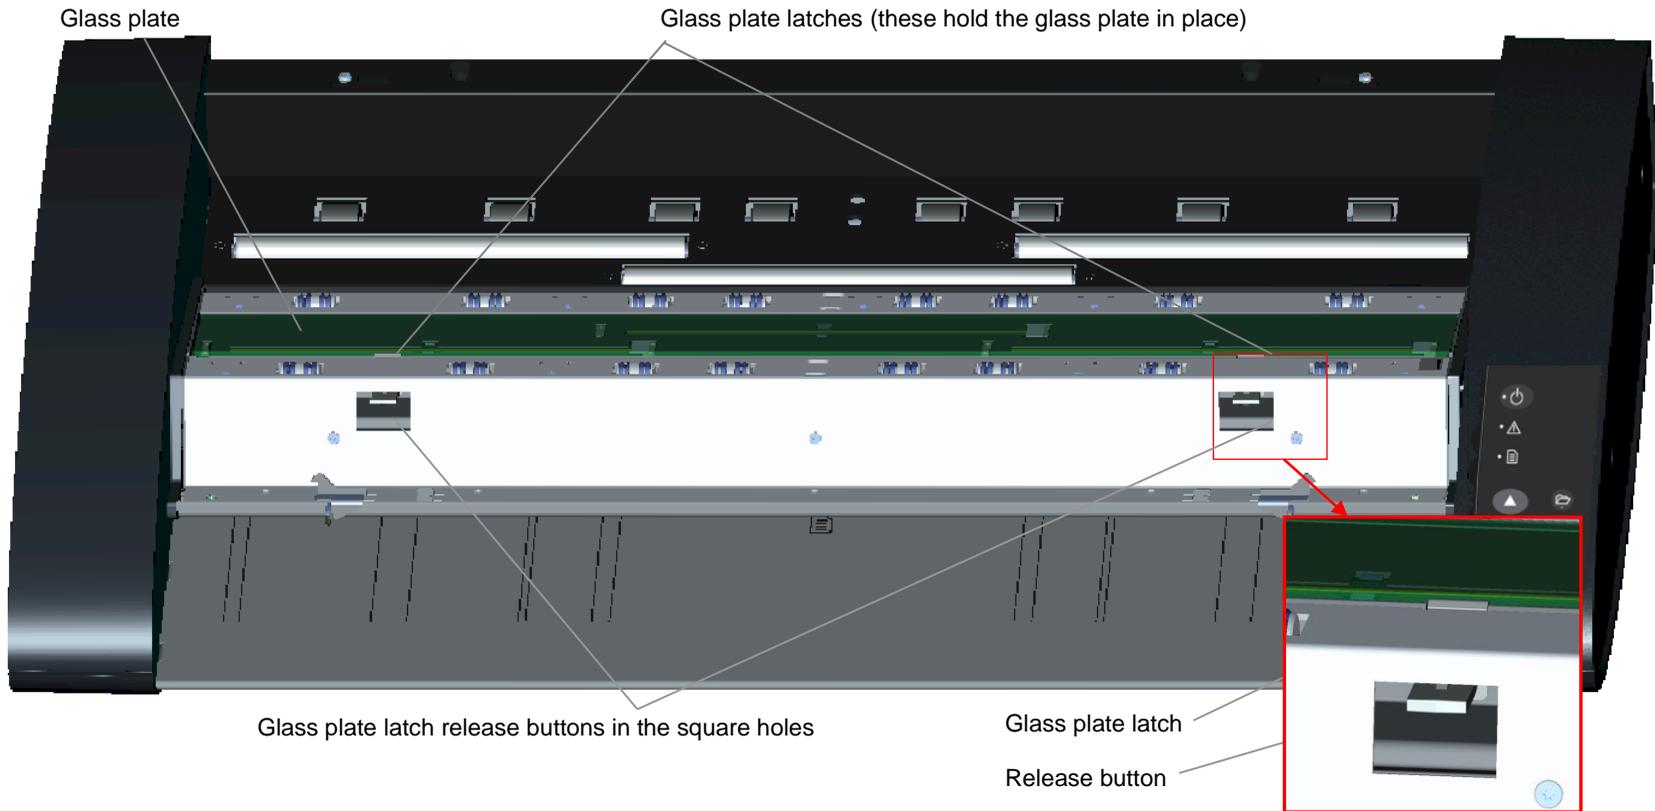

5

## Detaching the glass plate – free the 1<sup>st</sup> latch


Stand at the front of the scanner. You start at the scanner's right side.

1. Detaching the first (rightmost) latch requires a sharp, flat tool such as a pen or a small screwdriver.



**NOTE:** Detaching the remaining latch will not require use of a tool.

2. Locate the **arrow label** at the scanner's right side.
3. Position the tool just under the glass plate edge where the arrow label indicates. At the same time; press down on the latch release button in the first (rightmost) square hole.
4. Carefully, use the tool to flip the edge of the glass upwards until it comes above and free of the white latch that held it down.
5. Release the latch release button.

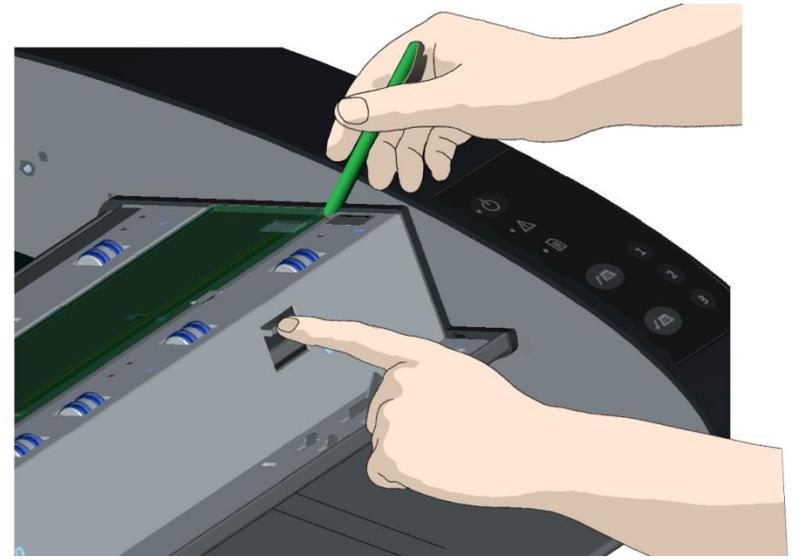


6

## Detaching the glass plate – free the 2<sup>nd</sup> latch

After freeing the first latch in the previous step, freeing the 2nd latch is easy.

1. Press down on the latch release button in the 2nd square hole.
2. The 2nd latch will release its grip and the glass will pop up over the latch.
3. Let go of the latch release button.

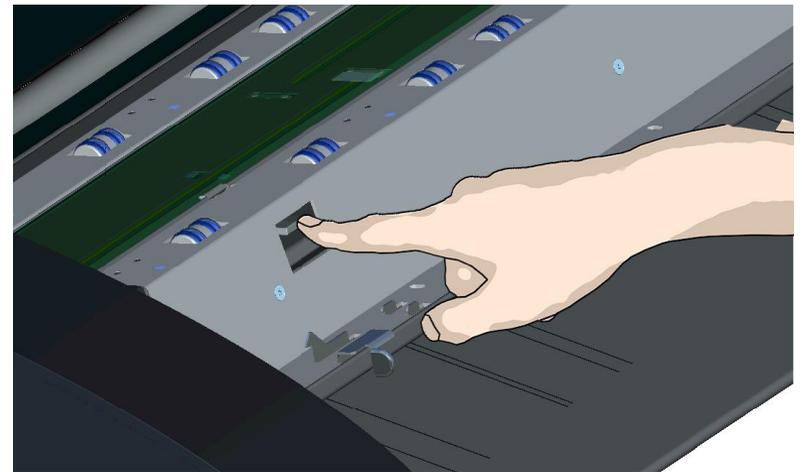

7

## Detaching the glass plate – Tip the glass plate edge upwards


After releasing the latches, the glass plate is now free for removal.

1. Stand at the front side of the scanner.
2. Insert your thumbs under the glass plate edge around the middle area as shown in the illustration on the right.



**NOTE:** If you can't get your thumbs under the glass - use the sharp, flat tool from step 5 to tip the glass high enough to get a thumb underneath.

3. Tip the glass back and up so its two ends are free.

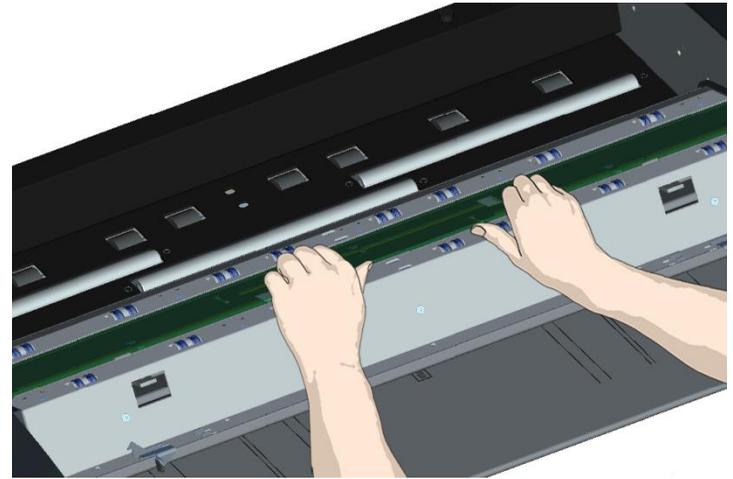


8

## Detaching the glass plate – Lift the glass plate edge out of the scanner

1. Move your hands, one at a time, to each end of the glass.
2. Apply light pressure with each hand as you lift the glass out of the scanner.



**CAUTION:** The glass plate is long and thin and thus fragile. Take care not to break it.

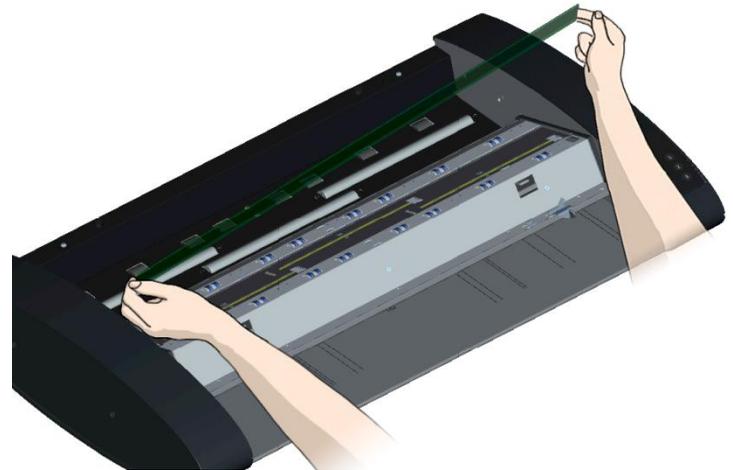


9

## Insert a new glass plate – lower a new glass plate into the scanner


1. Pick up the new glass plate in the same manner as you removed the old one - with two hands holding the glass on each end so you avoid touching the glass surface.
2. **Take special care** to avoid touching the glass plate's bottom surface which normally will not be cleaned during maintenance.
3. Stand at the front of the scanner as you hold the glass.
4. Make sure you hold the glass for insertion with the correct surface facing down. Note the direction of the faceted edges that indicate which is the bottom surface of the glass. See the illustration of the glass plate's profile below.
5. Hold the glass so that the bottom side surface faces your body as indicated in the glass plate's profile view below.
6. Lower the new glass plate into the scanner at an angle, as shown in the glass plate's profile view below, so that the glass's lower edge meets the scanner's bottom position groove (see next step).

**!** **CAUTION:** The glass plate is long and thin and thus fragile. Take care not to break it.

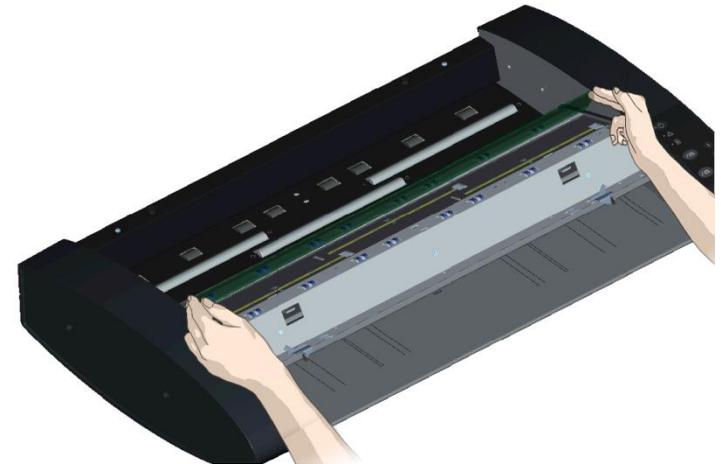

### **Glass Plate Profile View:**

*As you lower the glass plate into the scanner, hold it at an angle similar to that shown in the illustration:*

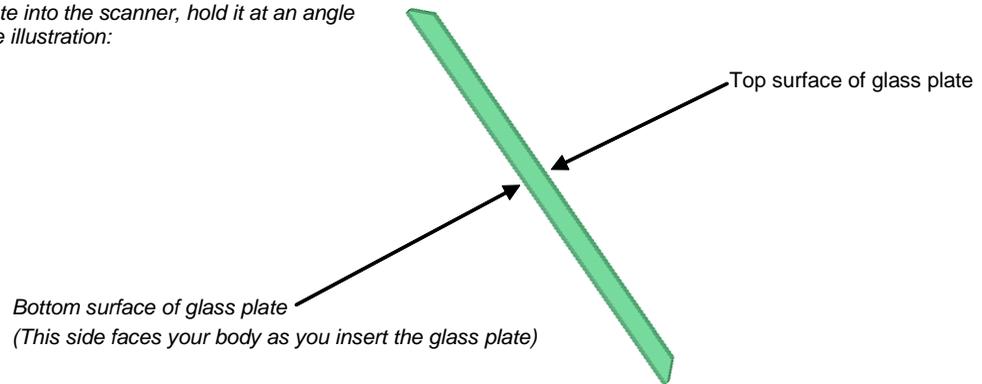


10

## Insert a new glass plate – fit into bottom position groove

1. The glass plate will rest in the scanner's lid between the bottom and top position grooves. Locate the glass plate's bottom position groove in the lid. This is the groove furthest from your body when you stand at the scanner's front.
2. Place the lower edge of the glass plate so it rests in the glass plate's bottom position groove.
3. Carefully tilt the upper edge (the edge closest to your body) down until the glass plate rests in the scanner lid between the 2 grooves (top/bottom position grooves).

*Glass plate lower edge*

*Bottom position groove*

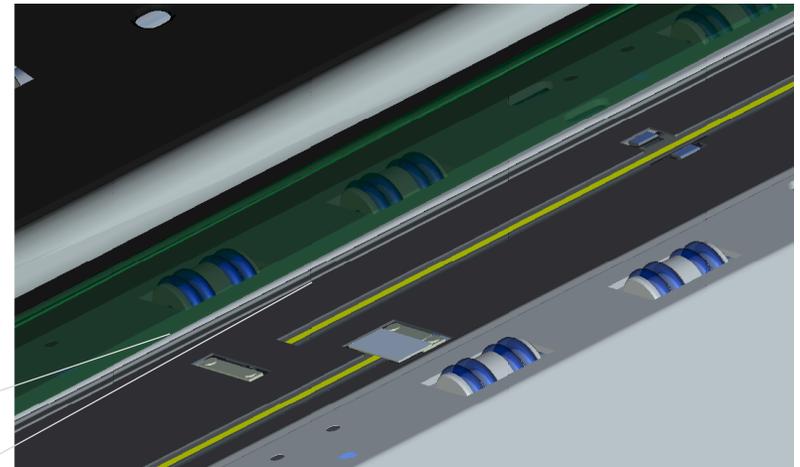


11

## Lock the new glass plate in place

The glass needs to be locked in place with the two latches. At this point, the latches are under the glass plate and they need to be brought above so they grip the glass plate's edge.

1. Start at the right side.
2. Press down on the first (rightmost) latch release button.
3. With your other hand, press down on the glass plate near the latch so the glass plate's edge snaps down under the latch.
4. Repeat the process with the other latch.
5. Ensure that both latches are gripping the glass plate's edges.

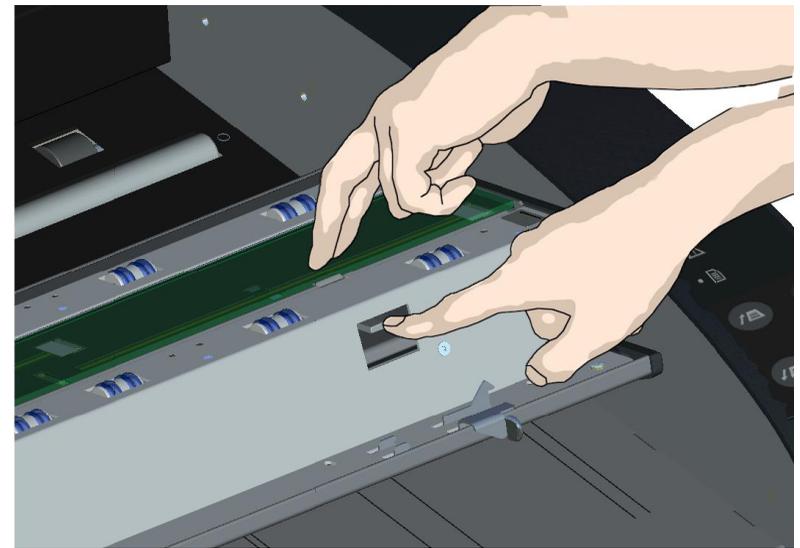


12

## Clean the new glass plate

Make sure you use 2 fresh and clean lint-free cloths for cleaning your new glass plate.

1. Spray/apply a mild, streak-free, glass cleaner onto a lint-free cloth.
2. Gently wipe the glass clean. Look for fingerprints and smudges that may have been applied to the glass during replacement.
3. Dry the glass completely using the other clean, dry lint-free cloth.
4. Make sure that fluids do not get under the glass and that you leave the area dry.

 **CAUTION:** Do not spray/apply cleaner fluids directly on the glass plate or anywhere else in the scan area.

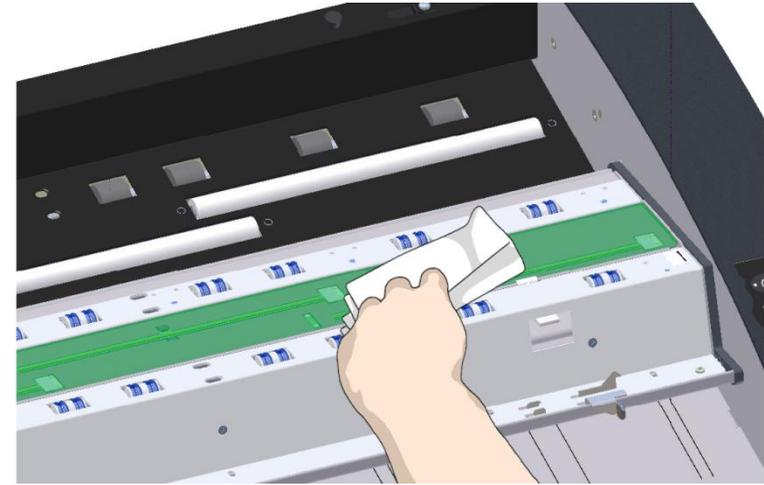

13

## Glass plate replaced successfully

1. Close the scanner lid all the way down until you hear the lid latches “click”. Gently try to pull open the lid to ensure it is locked in the “closed” position.
2. Plug in the scanner and turn the main power switch to ON.

3.  **NOTE:** If your results are not optimal after changing the glass plate, try to [calibrate the scanner](#) to tune it to its new glass plate.



## Downloading New Firmware

### What is Firmware?

Like a computer, your scanner needs an operating system in order to work. This operating system is called "Firmware". Firmware runs inside the scanner and links its processors with the PC applications running the scanner.

### When do I need new firmware?

Your scanner is shipped with the latest firmware available. You can afterwards upgrade your original firmware with newer firmware and continue to do so as they are released. Firmware upgrades can be downloaded from your manufacture's website or obtained through your dealer.

#### **Upgrade your firmware when:**

1. One or more new features are released or other improvements are made to the scanner through its firmware.
2. An error is discovered in the firmware version you have in the scanner and your manufacturer recommends installation of new firmware in which the error is corrected.



**NOTE:** Your manufacture's website specifies improvements for every new firmware release.

### How to identify the firmware version running in the scanner

1. Start WIDEsystem –double-click on the system tray's WIDEsystem icon. 
2. Select the **Info** tab.
3. The Info tab displays useful data about your scanner firmware.
4. *Firmware release* - Upgradeable firmware version.
5. *Firmware download time* - The date/time the current firmware was downloaded.

You can upgrade your firmware if the *Firmware Release* number is lower than the newest firmware version number on your manufacture's website.

### How to install new firmware

New firmware is installed by opening the firmware .exe file. The firmware .exe file must first reside on your machine. Select the Save target (or Save Link) option if downloading from the web.

#### **To install the firmware file on your scanner:**

1. Go to your manufacture's website and locate the new firmware for your scanner.
2. Download/save the firmware .exe file in a folder on your machine.
3. Double click the .exe file to start the installation wizard.
4. Follow the wizard's instructions on your screen.
5. Installation can take up to 1 minute depending on the scanner model and firmware version. The WIDEsystem scanner icon on your system tray blinks red during the process.



**NOTE: Update WIDEsystem** - When upgrading firmware, always update WIDEsystem to the latest version. WIDEsystem is available on your manufacturer's website.

## Trouble Shooting


This section describes trouble-shooting procedures for the most common issues that can arise with your scanner. Please look for a problem description that matches your actual situation. If found, perform the recommended trouble-shooting procedures before requesting a service call.

### How are errors reported on your system

The scanner panel *Error Indicator* will blink when the scanner detects an error. WIDeSystem will report the error type on your pc screen.

### Correcting common errors

1. The actual nature and cause of the error may be reported immediately through a message on your screen. If not, open WIDeSystem (double--click the WIDeSystem icon  on your system tray) and select the Status tab to view additional information about the error.
2. The information on your screen may include instructions and actions to remedy the error. Follow the instructions on your screen.
3. Look for a description of the error and remedy in the trouble shooting section of this user guide. Follow the instructions provided.

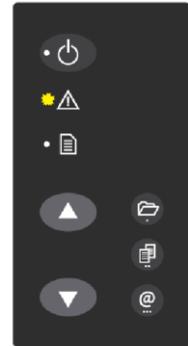

### Technical assistance

In some cases you may need technical assistance. You should contact your service provider if one or more of the following cases is true:

- a. ... the error cannot be remedied through the action suggested on your PC screen.
- b. ... the error and its remedy is not described in this user guide.
- c. ... the system fails to report the error on your screen.

Before calling technical assistance prepare the following:

1. Write down your scanner model number and serial number printed on the label on the back of the scanner – see the example IQ Quattro 44 label below.
2. Write down your Firmware version. See the section [How to identify the firmware version running in the scanner?](#)




**NOTE:** Your manufacture's website contains service provider contact information

<p>This Class A digital apparatus complies with Canadian ICES-003 Cet appareil numérique classe A conforme à la norme NMB-003 du Canada</p>	<p>전자용품안전관리법에 의한 표시 안전인증(자율)번호 : 공급자책임성확인 제 품 명 : 도면스캐너 제 도 명 : MR52D 정 격 전 압 : AC 100-240 V, 50/60 Hz, 1.0 A 제 조 자 명 : CONTEX A/S 제 조 국 : 덴마크 A/S 연락처 : 02-2164-9111 제 조 년월 : 별도표기 주 의 사 항 : 본제품을 사용하기 전에 반드시 사용설명서를 읽어 보시기 바랍니다</p>		<p>MODEL NO: 型号 MR52D</p>	<p>SERIAL NO: 52DRYVnnnROC</p>									
<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>	<p>この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。VCCI-A</p>	<p>UL US LISTED I.T.E. E125496</p>	<table border="1"> <tr> <td>FREQUENCY RANGE</td> <td>50/60 Hz</td> <td>頻率範圍 / 頻率範圍</td> </tr> <tr> <td>AC VOLTAGE</td> <td>100 - 240V~</td> <td>交流電壓 / 交流電壓</td> </tr> <tr> <td>CURRENT MAX.</td> <td>1A</td> <td>最大電流 / 最大電流</td> </tr> </table>	FREQUENCY RANGE	50/60 Hz	頻率範圍 / 頻率範圍	AC VOLTAGE	100 - 240V~	交流電壓 / 交流電壓	CURRENT MAX.	1A	最大電流 / 最大電流	<p>CONSUMO DE ENERGIA POR UNIDAD DE TIEMPO EN OPERACION DEL EQUIPO: 25Wh CONSUMO DE ENERGIA EN ESPERA POR UNIDAD DE TIEMPO DEL EQUIPO: 1Wh Laitte on liitettävä suojakoskettimilla pistorasiaan. Apparatet må tilkoples jordet stikkontakt. Apparaten skall anslutas till jordat uttag.</p>
FREQUENCY RANGE	50/60 Hz	頻率範圍 / 頻率範圍											
AC VOLTAGE	100 - 240V~	交流電壓 / 交流電壓											
CURRENT MAX.	1A	最大電流 / 最大電流											
<p>声明 宽幅扫描仪 此为A级产品。在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对干扰采取切实可行的措施。</p>				<p><b>contex</b> Svanevang 2, DK3480, Allerød, Denmark Made in Denmark 丹麦康泰科斯有限公司</p>									

## Problems Related to Scanner Installation

Problem	Possible Causes and Remedies
<p><b>'Unknown device found' message</b></p>	<ul style="list-style-type: none"> <li>• Your interface is not enabled on the PC or set up correctly. Go through the installation steps for your interface board and its driver and control that the Windows device manager lists the interface option.</li> <li>• WIDEsystem drivers were not installed before connecting the scanner. Shut down the scanner and PC, unplug power and USB connections and restart the installation from step 1 as described in the installation section of this guide. If you continued installation before installing WIDEsystem, see the troubleshooting instructions below.</li> <li>• Loose interface connection – on both ends, unplug and then firmly plug-in the interface cable.</li> <li>• System needs rebooting - shut down the scanner and PC, unplug power and USB connections. Then plug in the USB connections and turn on the PC. When Windows is loaded, plug in the scanner power and turn on the scanner main power switch.</li> </ul>
<p><b>No functional drivers found – yellow error icon on scanner in Device Manager</b></p>	<p>If you connected and tried to install the scanner before installing WIDEsystem, the “unknown device found message” will appear. If you ignored this and continued to step through the dialogs from there, the scanner will be entered on the system as a new device without functional drivers. If this is the case, the scanner will be displayed in the Windows Device Manager with a yellow error icon. The scanner entry must be removed from the Device manager before re-installing correctly.</p> <ul style="list-style-type: none"> <li>• In the Device Manager - remove the scanner entry.</li> <li>• Shut-down the PC, shut down and unplug the scanner, disconnect the scanner from the PC.</li> <li>• Perform the installation from step 1 as described in the installation section of this guide. Be sure to install WIDEsystem before connecting the scanner.</li> </ul>
<p><b>WIDEsystem does not detect the scanner.</b></p>	<ul style="list-style-type: none"> <li>• The WIDEsystem driver version installed on your PC is older than your scanner model. Install the WIDEsystem drivers from the WIDEsystem TOOLS USB thumb drive that came with your scanner. If not available, download the newest version from your manufacturer’s website or contact your dealer to obtain the right WIDEsystem version.</li> <li>• WIDEsystem drivers were not installed before connecting the scanner. Shut down the scanner and PC, unplug the connections and restart the installation from step 1 as described above.</li> <li>• Loose interface connection – on both end, unplug and then firmly plug-in the interface cable.</li> <li>• System needs rebooting - shut down the scanner and PC, unplug the connections. Then plug in the interface connections, turn on the PC and when Windows is loaded, turn on the scanner.</li> </ul>


## Problems Related to Scanner Operation

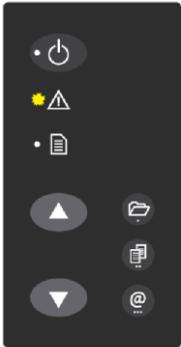Problem	Possible Causes and Remedies
<p><b>Error Indicator LED blinking</b></p> 	<p>An error was detected.</p> <p>The error may be reported immediately through a message on your screen. If not, open WIDEsystem (scanner icon on your system tray) and select the Status tab to view additional information about the error. Perform one of the following:</p> <ul style="list-style-type: none"> <li>• The information on your screen may include instructions and actions to remedy the error. Follow the instructions on your screen.</li> <li>• Look for a description of the error in this user guide. Follow the instructions provided.</li> </ul> <p>In some cases you may need technical assistance. You should contact your service provider if one or more of the following cases is true:</p> <ul style="list-style-type: none"> <li>• The error cannot be remedied through the action suggested on your PC screen.</li> <li>• The error and its remedy is not described in this user guide.</li> <li>• The system fails to report the error on your screen.</li> </ul>
<p><b>Need to contact Technical assistance</b></p>	<p>In order to get the best and fastest solution to your problem, you should prepare as much information as possible before calling your service provider for technical assistance. Your manufacture's website contains service provider contact information.</p> <p><a href="#">See instructions above.</a></p>

## Error message: Paper Jam


You know a Paper jam error has occurred when the scanner stops scanning and the Paper-Ready LED shuts OFF (from blinking) while the document is still engaged in the drive system. Your software will report the *Paper Jam error*. To remedy:

1. Eject the document from the scanner. Press and hold down the Paper-Backwards or the Paper-Forward key.
2. If the document does not eject/respond to pressing the keys you will need to open the scanner lid to remove it.
3. Simultaneously press the lid release buttons towards the scanner's center with your fingers until you feel them unlock. Use your other fingers to grip the edge of the lid.

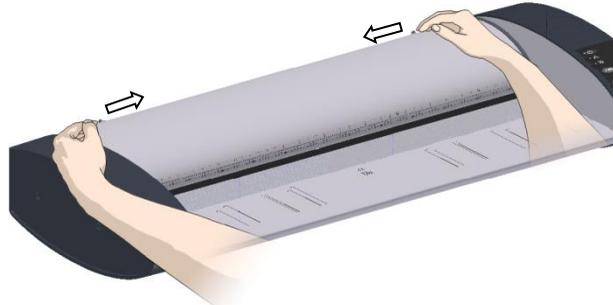

*Open the lid – Press the lid release buttons.*

3. With one hand, pull the lid backwards to open and use the other hand to pull out the document so it comes completely free of the scanning area.

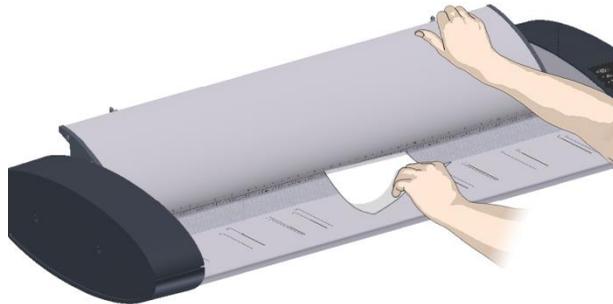

*Hold the lid open and remove the document.*

4. Close the lid.
5. When the scanner is ready again, reload the document again to scan.
6. If you still get a paper jam error, repeat the steps above but select the *Soft-handling* option in your software before reloading.

<p><b>Scanner Maintenance error message:</b> <b>Stitching .... failed</b></p>	<p>This message may appear when running the <i>Scanner Maintenance</i> program.</p> <ol style="list-style-type: none"> <li>1. The most common cause is a dirty or smudged glass plate. Clean the scanning area, reboot the scanner and then complete the calibration steps as described in the section <a href="#">Maintenance in this guide</a>.</li> <li>2. If the problem persists after cleaning the scanning area - The problem could be caused by a loose object in the optical path. Remove any torn pieces of paper or other loose objects from the scanning area. Even the smallest loose objects will disturb the scanner's adjustment function.</li> <li>3. Summon your technical service provider if the problem persists.</li> </ol>
<p><b>Application control keys (one touch) do not work</b></p>	<ol style="list-style-type: none"> <li>1. Check the One Touch setup entries in WIDEsystem. Click on the scanner icon  to open WIDEsystem and select the One Touch tab. View WIDEsystem Help for instructions.</li> <li>2. Check that the applications defined in the WIDEsystem One Touch setup entries are installed on your PC</li> <li>3. Make sure you have clicked "Reserve One-Touch" in WIDEsystem.</li> <li>4. Make sure that the applications defined in the WIDEsystem One Touch setup entries are actually designed to work with (compatible with) your scanner's application control keys. See the application's documentation or contact the application software dealer.</li> </ol>
<p><b>Can't operate or contact scanner after Firmware upgrade failure.</b></p>	<p>A power failure could interrupt an ongoing firmware upgrade process. The scanner will not run correctly after an interrupted firmware update process. Only part of the intended firmware may be loaded, rendering the scanner inaccessible. You need reboot the scanner to <i>Safe Mode</i> to reapply the firmware.</p> <p>Restart the scanner. If the scanner detects corrupted firmware, it will start up in <i>Safe Mode</i>.</p> <p>Confirm <i>Safe Mode</i>: Open WIDEsystem – Right-double-click the WIDEsystem scanner icon on your system tray. The "<i>Scanner:</i>" field should show "Scanner is in Safe Mode".</p> <p>Follow the steps for firmware installation.</p> <p> <b>NOTE:</b> <i>Safe Mode</i> is only for repairing a corrupted or interrupted firmware installation. Do not attempt to use the scanner when it is in <i>Safe Mode</i>.</p>

## Problems Related to the Scanning Results

Problem	Possible Causes and Remedies
<p><b>Entire image is not scanned</b></p>	<ol style="list-style-type: none"> <li>1. Check in your scanning application that your size settings are either for Auto detection or correspond to the size of the whole original.</li> <li>2. Check in your scanning application that you are loading the original correctly. Be sure to align the center of the original with the scanner's center arrow marking.</li> </ol>
<p><b>Stitching problems – Image sections misaligned (at points between the sensors -overlapping pixels)</b></p>	<ol style="list-style-type: none"> <li>1. Remove the original from the scanner and calibrate the scanner with the Scanner Maintenance program. Calibration includes correction of stitching errors.</li> <li>2. If the problem persists after calibration – Your sensors may need readjusting. Summon your technical service provider.</li> </ol>
<p><b>One or more thin vertical lines (in the direction of paper feeding) show up in the scanned image, but not in the original drawing.</b></p>	<p>This is often caused by an unclean glass plate. Even a single spec of dirt in the wrong spot on the glass plate can apply a streak along your entire scan. To remedy:</p> <ol style="list-style-type: none"> <li>1. Clean your glass plate and rollers as described in this user guide.</li> <li>2. Most dirt on the glass plate is introduced by the documents that are passed against it. Wipe clean the document with a dry lint-free cloth before feeding the document into the scanner.</li> <li>3. If the problem persists after cleaning, calibrate the scanner with the scanner maintenance program. The scanner may have memorized dirt specs and you need to recalibrate after dirt-removal.</li> <li>4. If the problem persists after cleaning and calibration –Check the glass plate for scratches. A damaged glass plate should be replaced. Obtain a new glass plate from your service provider. Follow the steps in the user guide to replace the glass plate with a new one.</li> </ol>

## Appendixes

### Important safety instructions



Read all of these instructions and save them for later use. Follow all warnings and instructions marked on the scanner.

**A.** Do not place the scanner on an unstable surface, stand, cart or table. Serious damage can be caused if the unit falls.

**B.** When cleaning, do not spray/apply liquid cleaners directly onto the scanner parts. Apply liquids to your cloth and then use the dampened cloth to clean.

**C.** Before **cleaning** or replacing any **user-replaceable parts**, be sure to turn the scanner power off and disconnect the power plug.

**D.** The scanner should be operated from the power source type indicated on the marking label. If you are unsure of the type of power available, consult your dealer or local power company.

**E.** The scanner is intended for use on IT, TT and TN power distribution systems, and is equipped with a three-wire grounding type plug. This plug will fit only into a grounding-type power outlet. This is a safety feature which relies on building installation. If you are unable to insert the plug into the outlet contact your electrician to replace your obsolete outlet. Do not defeat or ignore the purpose of the grounding-type plug.

**F.** Do not allow anything to rest on the power cord. Do not locate the scanner where persons will walk on the cord.

**G.** If an extension cord is used with the scanner, make sure that the total ampere ratings of the products plugged into the extension cord does not exceed the extension card ampere rating. Make sure that the total rating of \*all products plugged into the wall outlet does not exceed 15 amperes.

**H.** Slots or openings in the cabinet at the back or bottom are provided for ventilation. This ensures reliable operation of the product and protects it from overheating. These openings must never be blocked or covered. The openings should never be blocked by placing the unit on a bed, sofa, rug, or other similar soft surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.

**I.** Never push objects of any kind into the scanner through cabinet slots since they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Avoid any possibility of spilling liquid of any kind on the scanner.

**J.** Do not attempt to service the scanner yourself. Opening or removing those covers requiring tools may expose you to dangerous voltage points or other risks. Refer all servicing in those compartments to authorized service personnel.

**K.** Unplug the scanner from the wall outlet and refer servicing to authorized service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the scanner.
- If the scanner has been exposed to rain or water.
- If the scanner does not operate normally when operating instructions are followed then adjust only those controls covered by the instructions in this manual. Improper adjustment of controls other than those mentioned in this manual may result in permanent damage and will at best require extensive work by a qualified technician to restore this product to its normal operation.
- If the scanner has been dropped or the cabinet has been damaged.
- If the scanner exhibits a distinct change in performance, indicating a need for service.

## Regulations

### FCC Regulations

#### USA

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Caution: Pursuant to Part 15.21 of the FCC Rules, any changes or modifications not expressly approved by the manufacturer may cause harmful interference and void the use's authority to operate the equipment

### CE Regulations

#### EU

This equipment has been tested and found to comply with the limits for a Class A product according to EN55022.

### VCCI Regulations

#### Japan

This equipment has been tested and found to comply with the limits for a Class A product according to Agreement of VCCI:2008 (CISPR 22).

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

### Toxic or Hazardous Substances or Elements

#### 有毒有害物质或元素名称及含量

Part Name 部件名称	Toxic or hazardous Substances and Elements 有毒有害物质或元素					
	Lead (Pb) 铅	Mercury (Hg) 汞	Cadmium (Cd) 镉	Hexavalent Chromium (Cr (VI)) 六价铬	Polybrominated biphenyls (PBB) 多溴联苯	Polybrominated diphenyl ethers (PBDE) 多溴二苯醚
Scanner 荧光灯管	○	○	○	○	○	○
<p>O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006. 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。</p> <p>X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006. 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006标准规定的限量要求。</p> <p>(Enterprises may further provide in this box technical explanation for marking "X" based on their actual conditions. 企业可在此处根据实际情况对上表中打“X”的技术原因进行进一步说明。)</p>						

## Scanner weights (unpacked) & dimensions


Scanner (Model)	L x W x H cm (inches)	Scanner Weight kg (lbs)
IQ Quattro 2400 Series (MQ52D)	82.3 x 48 x 16.1 (32.4 x 18.9 x 6.3)	15.3 (33.7)
IQ Quattro 3600 Series (MT52D)	116 x 48 x 16.1 (45.7 x 18.9 x 6.3)	20.3 (44.8)
IQ Quattro 4400 Series (MR52D)	135 x 48 x 16.1 (53.1 x 18.9 x 6.3)	23.66 (52.2)

## Low Adjustable Stand and High Adjustable Stand working heights

Scanner (Model)	Low Adjustable Stand cm (inches)			High Adjustable Stand cm (inches)								
	low	med	high	h1	h2	h3	h4	h5	h6	h7	h8	h9
IQ Quattro 2400 Series (MQ52D)	82.7 (32.6)	85.2 (33.5)	87.7 (34.5)	Not available								
IQ Quattro 3600 Series (MT52D)				109.2 (43)	111.7 (44)	114.2 (45)	116.7 (45.9)	119.2 (46.9)	121.7 (47.9)	124.2 (48.9)	126.7 (49.9)	129.2 (50.9)
IQ Quattro 4400 Series (MR52D)												


 **NOTE:** The high and low adjustable stand accessories are not standard equipment with IQ Quattro scanners and need to be ordered separately.

## Low Adjustable Stand

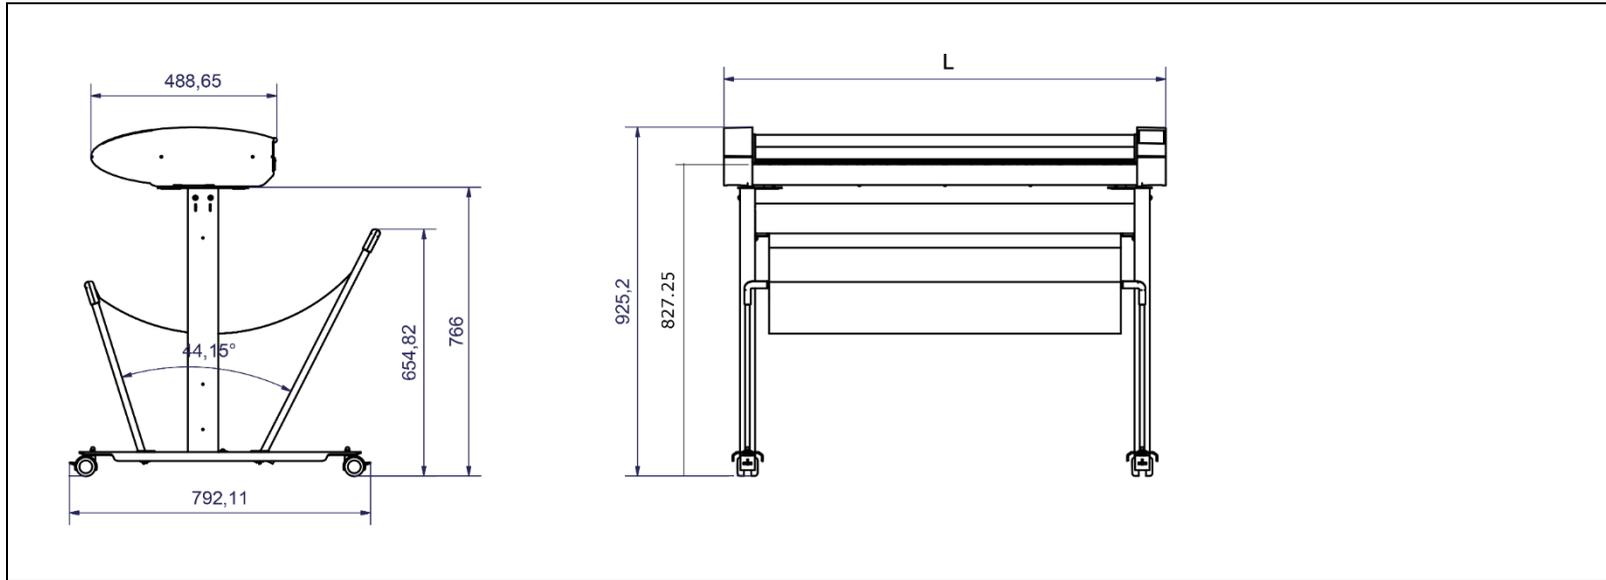

 **NOTE:** Drawing shows stand at its lowest working height setting of 82.7 cm (dimensions in mm).

## High Adjustable Stand

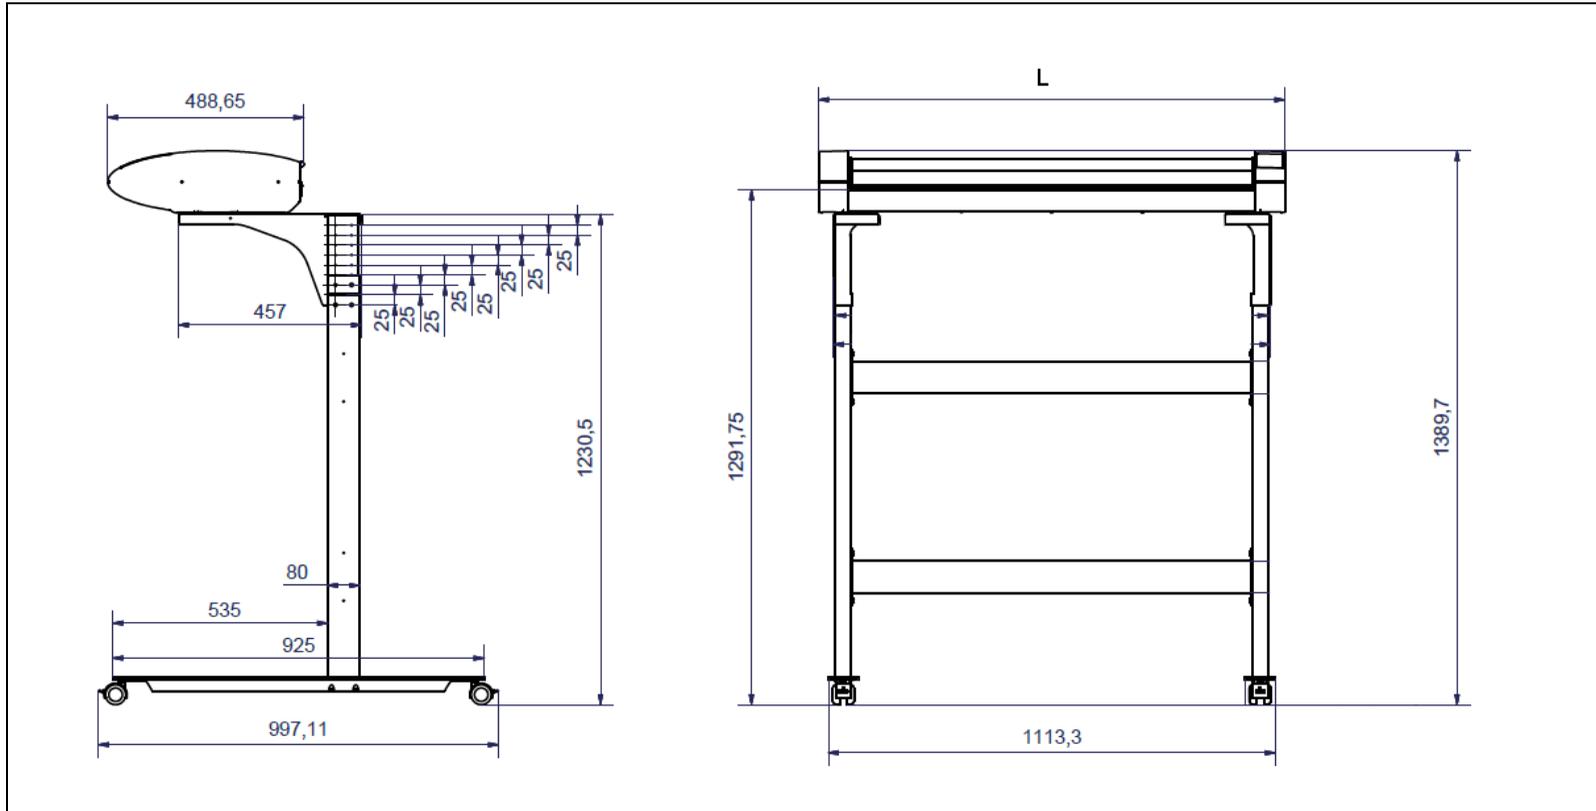

 **NOTE:** Drawing shows stand at its highest working height setting of 129.2 cm (dimensions in mm).